

Basic Manual



A5514SA

by SANYO

au by KDDI

**Contents/
Before Use**

Phone Call

**Address Book/
Pair Function**

Mail

Camera

EZweb

EZnavi

EZ・FM

**Infrared
Communication**

Smart Mode

**Inputting
Characters**

**Troubleshooting/
Remote Auto Lock**

Other Features

Index

Welcome

Thank you very much for purchasing the A5514SA.

Before using, read the A5514SA “Basic Manual (this PDF manual)” to ensure correct use of your A5514SA. After you have finished reading, store this PDF manual and the printed manuals in a safe place so that you can retrieve them whenever you need.

Contact au shop or au Customer Service Center if you lose either of these manuals.

Printed Manuals for the A5514SA

The A5514SA comes with Basic Manual and Manual.

Basic Manual



Equivalent to this English PDF manual.

Manual



English version is not available.

The following manuals are also available from au home page:

- The downloadable “Basic Manual” and “Manual”
(<http://au-pro.kddi.com/phone/torisetu/index.html>)
- The au online manual (Japanese) for searching by keyword
(<http://www.au.kddi.com/manual/index.html>)

The au online manual (Japanese) is also available from the EZ web:

<How to access>

EZ Top Menu → 料金・申込・インフォ (Charges, application and information)

→ auオンラインマニュアル (au online manual)

Have access to the au online manual by reading the bar code (QR code).




Note that the shape and typeface used in the screens of this manual may differ from those used in the actual screens, and some screens are partly omitted.

Cellphone Etiquette

Cellphones emit weak radio waves at all times even if you just turn the power on. Enjoy and safely use your cellphone without forgetting those around you.

Some places forbid the use of cellphones.

- Using cellphones while driving is dangerous and forbidden by law.
- Using cellphones in airplanes is forbidden by law. Be sure to turn your cellphone OFF.

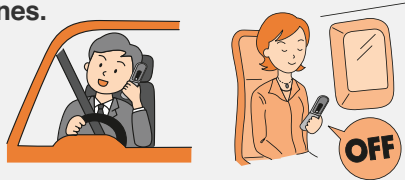



Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries, and other similar places. Turn your cellphone off or set it to the silent mode to prevent others around you from being inconvenienced by ring tones.
- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.
- Get other people's permission before you start taking photos with the cellphone's camera.



Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers. Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.

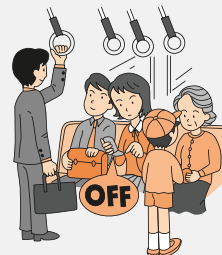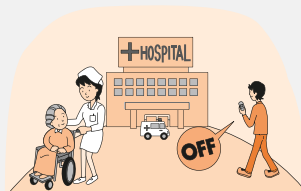

What You Can Do with the A5514SA


Mail



You can send mail to other cellphones or personal computers.

Page 44


Camera

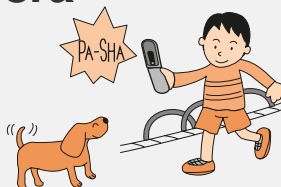

You can take photos or movies and send them easily by E-mail.

Page 56

EZnavi

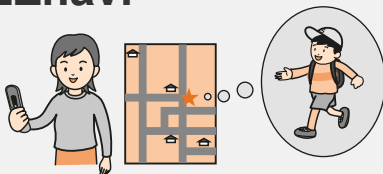

You can access position information using the functions such as EZ Navi Walk, Position Search, and Area Message.

Page 70

EZweb



You can download Chaku-Uta®, wallpaper and others.

Page 62

Use Overseas



You can use the A5514SA overseas with global functions.

Page 34

EZ • FM




You can use the A5514SA as FM radio.

Page 74

Silent Mode and In-Phone Ans Machn

Silent Mode

You can use the silent mode to turn incoming rings and other tones off to prevent others from being inconvenienced.

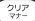
Press  for more than one second in the standby screen.



Page 31

In-Phone Ans Machn

You can play answering message and record caller's message when you cannot answer a call.

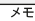Press  for more than one second in the standby screen.




Page 32

Check the Power, Radio Waves, and Battery!

Usually, keep the “power” ON.




Keep the power on to make or answer calls.
Press  for more than one second.

Page 13

You cannot talk on the phone if you are not receiving “radio waves”.



It may be difficult to receive radio waves in some places even in service areas.

 indicates the reception state.

Page 13

Pay attention to the remaining “battery” power.



You cannot use the cellphone when the battery goes off.
Charge the battery soon when the remaining power is too low.

 indicates the remaining battery power.

Page 13

Do Not Use the Cellphone While Driving

Using cellphone while driving is subject to penalties.

Holding a cellphone in a hand and use it for a call or gazing at a screen to see mails, etc. while driving is subject to penalties.

(November 1, 2004 Implementation of the Revised Road Traffic Law)



Holding a cellphone in a hand and use it for a call



Gazing at a screen to see mails, etc.

Use drive mode or turn the power off while driving.


Drive Mode

When the drive mode is set, the caller will hear the answering message “Now driving. I can’t answer the phone right now... (Japanese)”, and can leave a message in the In-Phone Ans Machn.




From the standby screen, press  , use  to select “Car”, and press  [Select].

Standby screen

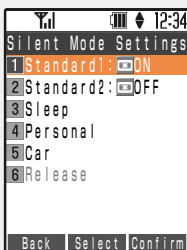

Select “Car”
and press .

 

Watch Out for Junk Mail and One-Ring Calls!

If you receive junk mail...

● Mail Filter

Using the mail filter function, you can reject mails sent from specific addresses or mails that contain “未承諾広告※ (Unsolicited Ad)” in the title, which is the biggest source of junk mail.

The following mail functions are available for preventing arrival of junk mail:

- “未承諾広告フィルター” : Rejects Unsolicited Ad mails.
- “アドレスフィルター” : Rejects mails sent from specific addresses.

Page 51

● Change E-mail Address

You can prevent arrival of junk mail by changing E-mail address.


Page 22



If you receive a call from unknown number...

It may be a “One-Ring Call” which intends to trick you into calling back and accessing unwanted pay programs. Be careful to a call from unknown number.

● Icon for One-Ring Calls

The icon () is displayed in the log of One-Ring Call and lets you know the caller hung up within 3 seconds.

Received		Dialed	
01	Sat12/24 12:34	0900003xxxx	NO IMAGE
02	Sat12/24 7:20	Mike	NO IMAGE
03	Thu12/22 12:45	0900004xxxx	NO IMAGE
04	Thu12/22 12:07	Mary	NO IMAGE
Back		Select	Submenu



Disaster Message Board Service

About Disaster Message Board


When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be confirmed from anywhere in Japan through EZweb or Internet.

Registering safety information

- When a big scale disaster occurs, you can register your safety information such as your condition and comments from au cellphone to the “災害用伝言板 (Disaster Message Board)” created on the EZweb.
- After registering your safety information, you can notify by E-mail your family or acquaintances you have previously specified that you registered your safety information on the “災害用伝言板 (Disaster Message Board)”.

Confirming safety information

- You can confirm the safety information of the person you want to know about by entering his/her phone number from EZweb or Internet.
 - * When you confirm the safety information from other carriers' cellphone (except TU-KA), PHS or personal computer, access the following URL.

How to access	 → Top Menu → 災害用伝言板 (Disaster Message Board)
	http://dengon.ezweb.ne.jp/

Top screen of Disaster Message Board

Register

Safety information confirmation screen

Confirm

Safety information registration screen

- * The maximum preservation period of the registered information is 72 hours.
- * The maximum available number of each registration is 10.
- * The demonstration of this service can be referred to anytime by accessing
EZ Top Menu → 料金・申込・インフォ (Charges, application and information)
→ 災害用伝言板(デモ版) (The demonstration of Disaster Message Board)
- * You can use English version by selecting “English”.

Contents

Cellphone Etiquette	1
What You Can Do with the A5514SA	2
Silent Mode and In-Phone Ans Machn	3
Check the Power, Radio Waves, and Battery!	3
Do Not Use the Cellphone While Driving	4
Watch Out for Junk Mail and One-Ring Calls!	5
Disaster Message Board Service	6
Contents	8

Before Use	Confirming the Packed Contents	10
	Names of Parts	11
	How to Charge the Battery Pack	12
	Turn the Power On/Off	13
	Basic Operation	14
	Viewing the Screen	16
	About Menu	17
	Setting the Language to English	18
	Initial Setting for E-mail and EZweb	20
	Confirming Your Cellphone Number/E-mail Address	21
	Changing Your E-mail Address	22

Phone Call	Making a Call	24
	Answering a Call	25
	Calling Back (Dialed/Received)	26
	Adjusting the Caller's Voice Volume	27
	Adjusting the Ringer Volume	28
	Changing the Ringer Type	30
	Setting the Silent Mode	31
	Using the In-Phone Ans Machn	32
	Using Overseas	34

Address Book/ Pair Function	Saving to the Address Book	36
	Making a Call from the Address Book	39
	Editing an Entry in the Address Book	40
	Saving from Dialed/Received Log	41
	Setting a Pair Person	42
	Making a Call to a Pair Person	43

Mail	About E-mail	44
	Creating and Sending an E-mail	45
	Reading a Received E-mail	48
	Replying to a Received E-mail	50
	Blocking Junk Mail	51
	About C-mail	52
	Creating and Sending a C-mail	53
	Reading a Received C-mail	55

Camera	What You Can Do with the Camera	56
	Taking a Photo.....	58
	Recording a Movie	59
	Sending Photos or Movies by E-mail.....	61
EZweb	About EZweb	62
	Accessing Sites	63
	Downloading Chaku-Uta® and Set It as a Ringer for Incoming Calls	65
	Registering Frequently-Accessed Sites	67
	Inquiring Toll	69
EZnavi	What You Can Do with EZnavi	70
	What You Can Do with Security Navi	72
EZ • FM	How to Use the EZ • FM.....	74
Infrared Communication	About Infrared Communication	76
	Using Infrared Communication	77
Smart Mode	About Smart Mode	80
	Using Smart Mode	84
Inputting Characters	About Inputting Characters	90
	How to Input Characters	92
Troubleshooting/Remote Auto Lock	Troubleshooting.....	96
	Before Losing...(Remote Auto Lock)	97
Other Features	Other Features.....	99
Index	Index	100


Before Use

Confirming the Packed Contents


- A5514SA Main Unit




- Battery Pack
(Installed in the main unit)

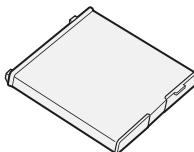


- Desktop Holder

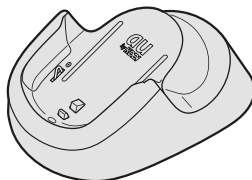

- AC Adapter

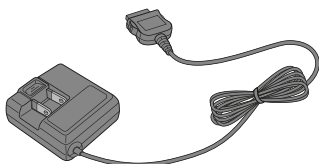

- SANYO Flat-type Stereo Earphones 04

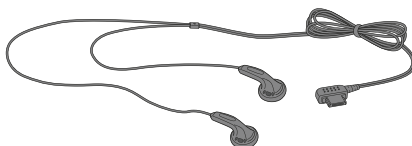

- Basic Manual (Japanese)




- Manual (Japanese)



- Warranty (Japanese)
- Precautions in Use (Japanese)
- GLOBAL PASSPORT Owner's Manual

Names of Parts

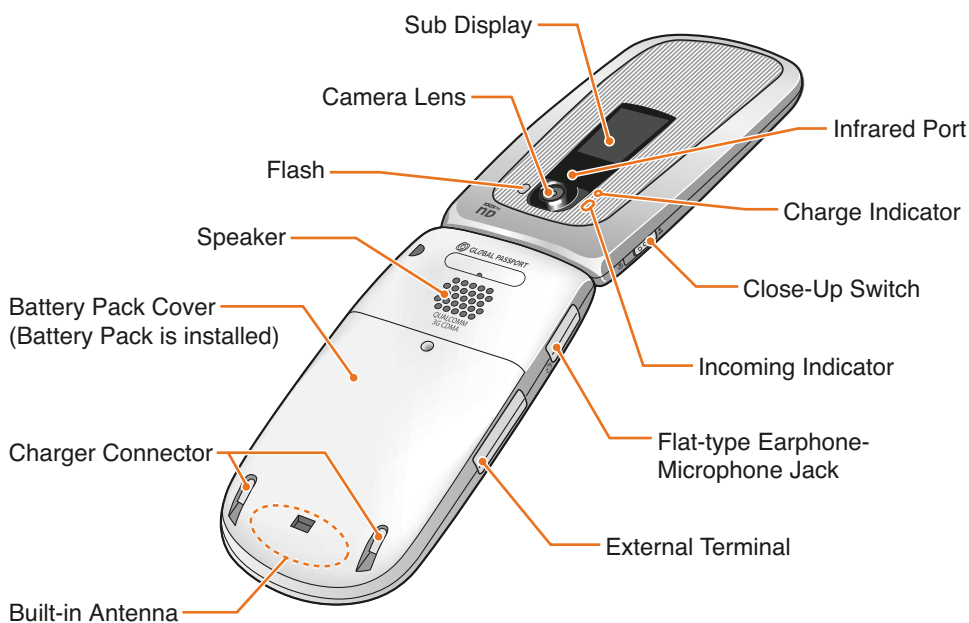

Contents/Before Use

To Charge Using the Desktop Holder

Charge Indicator

-
- Indicator**
 It is on → Charging
 off → Charging is completed
- AC Adapter**
- 2**
- Power Plug**
 Fold out
- 3**
- Desktop Holder**
- 1**
- Connector**

Charge Indicator

- Red light is on → Charging
- Light is off → Charging is completed

AC Adapter

Power Plug


External Terminal

Connector

Fold out

Turn the Power On/Off

To Turn the Power On


Press  for more than one second.

The standby screen is displayed.

Standby screen








To Turn the Power Off

Press  for more than one second.

Confirming the Reception State and Remaining Battery Power








Check here for the reception state!

				
Strong	Medium	Weak	Too weak	Out of service area

* You cannot receive or make calls when “Out” (Out of service area) is displayed.

Check here for remaining battery power!

			
Fully charged	Low	Requires charging	Fully discharged

*  is displayed while charging.

Basic Operation

Key Functions



Cursor Keys

- Move cursor or screen
- In the standby screen, display Dialed calls log by pressing right or Received calls log by pressing left

Cursor keys are indicated in this manual as follows:

Up	Down	Left	Right



Address Book Key

- Displays Address Book



Mail Key

- Displays E-Mail/C-Mail Menu



Talk/Pair Key

- Makes/Receives calls
- Displays Pair Menu



Clear/Manner Key

- Sets the silent mode
- Deletes entered characters

Cursor



Center Key

- Displays Main Menu
- Selects an item where the cursor is placed



Application Key

- Launches EZ apps(BREW®)



EZweb Key

- Connects to EZweb




Power/End Key

- Turns the power on/off
- Ends a call

Dial Keys

- Enter phone numbers or characters

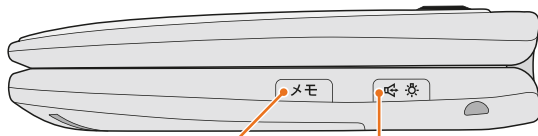

Memo Key

- Sets the In-Phone Ans Machn
- Plays recorded calls messages




Speaker-Phone/Light Key

- For using Speaker-Phone function
- For using as Light

Executing Functions Displayed at the Bottom

The functions displayed at the bottom of the screen correspond with the keys as follows:

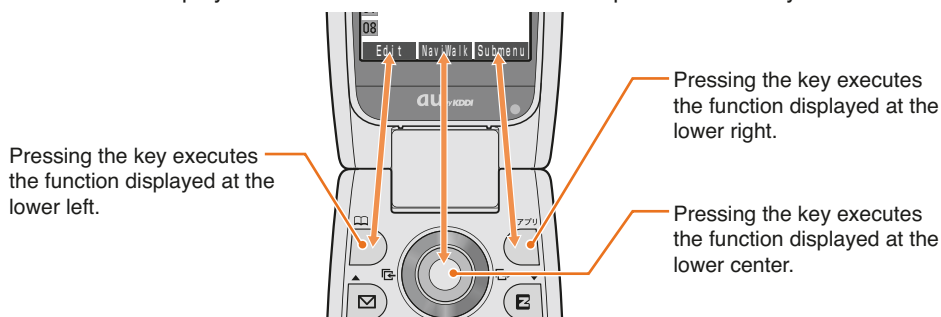

Selecting Items/Returning


To select an item, use to move the cursor and press .

An item with numeric icon can also be selected by pressing the corresponding dial key. To go back to the previous screen, press . When **Back** is displayed at the bottom of the screen, pressing the corresponding key also allows you to return to the previous screen.

To return to the standby screen, press .

<Example>


Standby screen

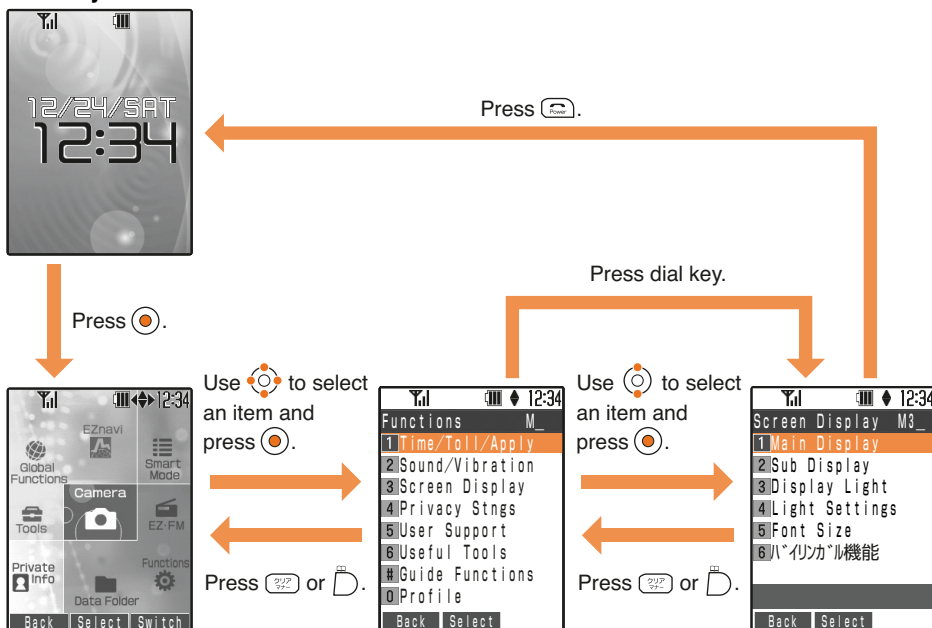

Viewing the Screen

Indication in the Main Screen

The following icons are displayed in the main screen and indicate the status of your A5514SA. Icons and the number of cases are displayed when you have received missed calls or mails.

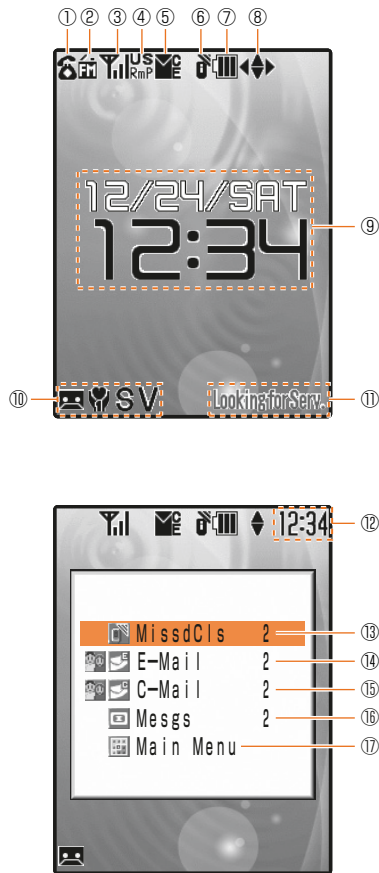




①		During a call
		Using EZweb
		Running EZ apps
②		Running EZ · FM
③		Reception state
④	Area setting AU : Australia CN : China (except Hong Kong) KR : Korea NZ : New Zealand ID : Indonesia TW : Taiwan MX : Mexico US : USA TH : Thailand HK : China (Hong Kong) CA : Canada NS : New service area *No indication when Japan is set	
	Rm	Phone calls are available in roaming area
	P	Packet communication is available in roaming area
⑤		Unread E-mail
		Unread C-mail
⑥		Unchecked missed call
⑦		Battery level
		Charging
⑧		Indicates the directions to scroll
		Appears when the volume setting is available while confirming or playing data
⑨	Current date and time	
⑩		Silent Mode is ON
		In-Phone Ans Machn is ON
⑪		Looking for service area while roaming
⑫	Current time	
⑬		Missed Call
⑭		New E-mail*
⑮		New C-mail*
⑯		New memo in the In-Phone Ans Machn
⑰		To main menu

* is displayed when you have a mail from pair person.

About Menu

About Main Menu


Pressing  in the standby screen launches the Main Menu. Each function can be accessed by using  to select an image and pressing .


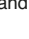
<Example> Accessing Camera from Main Menu

Standby screen




Main Menu screen

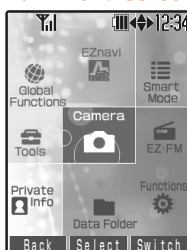

Use  to select "Camera" and press .



Camera function screen

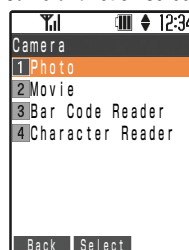


About Submenu

When "Submenu" is displayed at the bottom of the screen during each operation, you can access related functions or information by pressing the key that corresponds to Submenu.

<Example> Displaying Photo's Submenu




[Submenu]

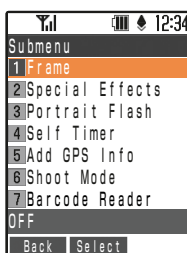


Setting the Language to English


- 1** Press  in the standby screen.



- 2** Use  to select “機能” and press  [選択].

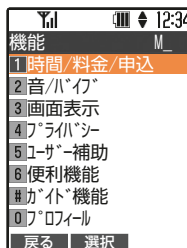

- 3** Use  to select “画面表示” and press  [選択].

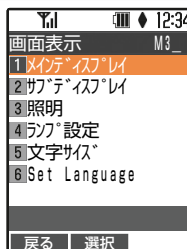


- 4** Use  to select “Set Language” and press  [選択].


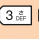




5

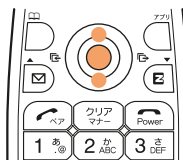Use  to select “English” and press  [選択].




Information

- You can set the language to Japanese by pressing in turn  3  6  1  from the standby screen.

Initial Setting for E-mail and EZweb


To use E-mail and EZweb services, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using E-mail and Ezweb services for the first time. The initial setting automatically determines your E-mail address. To change it as you like, see “Changing Your E-mail Address” (p.22).

1 Press in the standby screen.

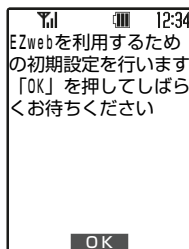

2 Press [OK].

Your E-mail address is determined automatically by the initial setting.

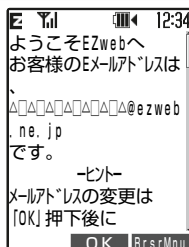



3 Press [OK].

The initial setting is completed and E-mail Menu appears.





Information

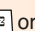- Pressing  or  in the standby screen also allows you to do the initial setting.

Confirming Your Cellphone Number/E-mail Address



1

Press  in the standby screen.

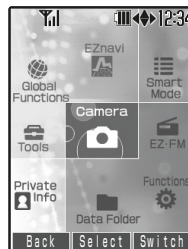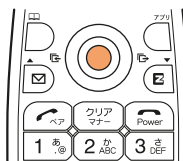



2

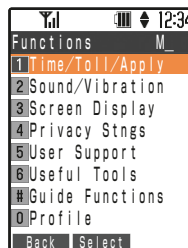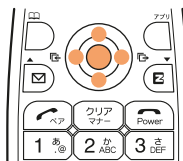
Use  to select "Functions" and press  [Select].





3

Use  to select "Profile" and press  [Select].

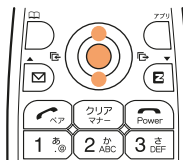Your cellphone number and E-mail address are displayed.



Information

- You can also display them from the standby screen by pressing , and then .

Changing Your E-mail Address



E-Mail Address


△△△@ezweb.ne.jp



Changeable part



- 1 Press  in the standby screen.



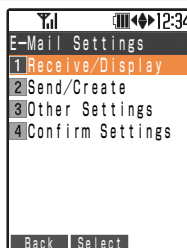


- 2 Use  to select "E-Mail Settings" and press  [Select].



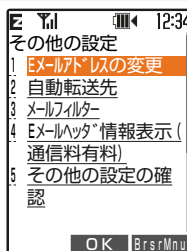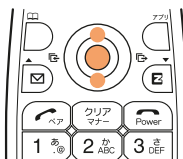


- 3 Use  to select "Other Settings" and press  [Select].

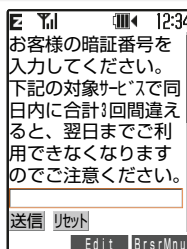



- 4 Use  to select "Eメールアドレスの変更 (Change E-mail Address)" and press  [OK].





5



Enter your lock code, press , use  to select **送信 (Send)**, and press  [OK].

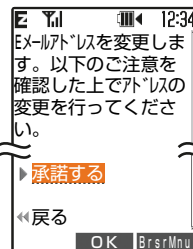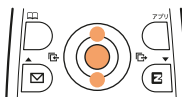- Lock code is the 4-digit number you wrote in the application form when purchasing.
- No setting operation is allowed until the next day if you enter the incorrect lock code 3 times in a day.






6

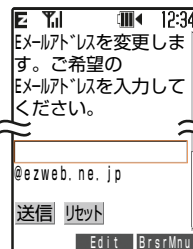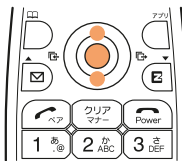Use  to select **“承諾する(Agree)”** and press  [OK].




7

Use  to select the input field, enter an E-mail address, and press  [Set].

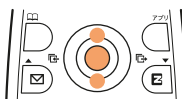



- See “Inputting English Characters” (p.93) about the characters available for E-mail address and the way of entering E-mail address.

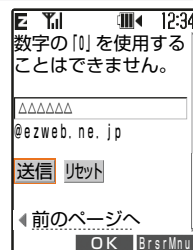



8

Use  to select **送信 (Send)** and press  [OK].

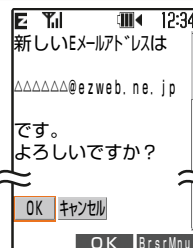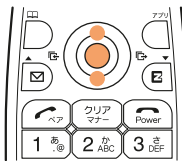
- When the E-mail address you enter is already being used, enter a different one.



9

Use  to select **OK** and press  [OK].

Your E-mail address is changed.

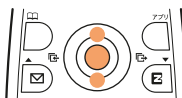


Phone Call

Making a Call

1

From the standby screen, press **0** 0 0000 - **9** 9 9999 to enter a phone number.


- To call a regular phone, enter a phone number starting with the area code.

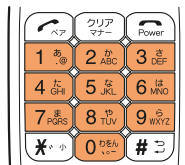

2

Press **Call**.



To end the call, press **End Call**.

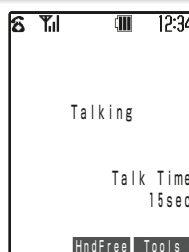

To Select the Way of Dialing

1

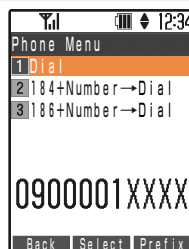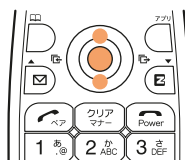

After entering a phone number, press **[Dial]**, use **[Up/Down]** to select the way of dialing, and press **[Select]**.





- The following are details of each menu:
 Dial : Makes a call in accordance with the Caller ID Notice setting.
 184+Number → Dial : Not notify the other party of your cellphone number.
 186+Number → Dial : Notifies the other party of your cellphone number.

Answering a Call


1

Press  to answer the call.
 To end the call, press .






On-screen display for Incoming calls

Phone number	The caller notifies his/her phone number. If the caller is already saved in the Address book, his/her name or image is also displayed.
No Caller ID	The caller does not notify his/her phone number.
Payphone	The caller is making a call from a payphone.
Unsupported	The caller is making a call from a phone that does not support ID notification.








When You Could Not Answer a Call (Missed Call)



 (MissdCls) and the number of missed calls are displayed.

1

Use  to select  (MissdCls) and press .
 Received calls log is displayed.

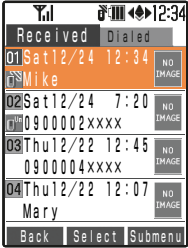Calling Back (Dialed/Received)

<Example> Calling back from Received log

1

Press  in the standby screen.

Received calls log is displayed.




Received	Dialed
01 Sat 12/24 12:34	NO IMAGE
02 Sat 12/24 7:20	NO IMAGE
03 Thu 12/22 12:45	NO IMAGE
04 Thu 12/22 12:07	NO IMAGE
Mary	
Back	Select Submenu


2

Use  to select a desired number and press .

Phone starts dialing the phone number you selected.

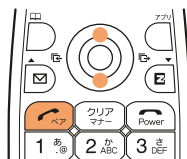

Information

- To call back to a number from dialed calls log, press  in the standby screen.
- The latest 20 phone numbers you dialed and received are saved in each log.


Adjusting the Caller's Voice Volume


1

Press  during a call.

The volume can be adjusted in 5 levels.

 : turns the volume up


 : turns the volume down

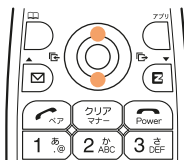


Phone Call



Adjusting the Ringer Volume

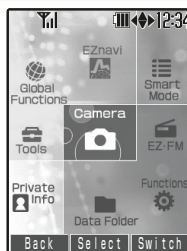
- 1 Press  in the standby screen.

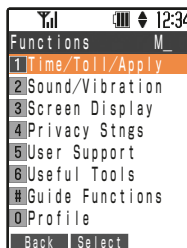

- 2 Use  to select “Functions” and press  [Select].




- 3 Use  to select “Sound/Vibration” and press  [Select].

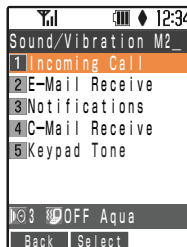



- 4 Use  to select “Incoming Call” and press  [Select].

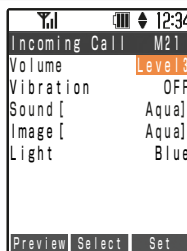The actual volume is displayed in incoming call setting screen.





5


Use  to select “Volume” and press  [Select].

The volume can be adjusted in 5 levels.

 : turns the volume up

 : turns the volume down

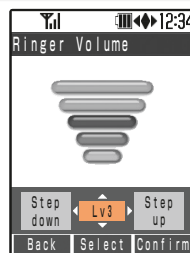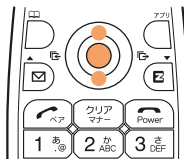

- To confirm the volume, press  [Confirm].

- To mute the ringer, set the volume to S (OFF).



- To set Step down/Step up, press .

Step down : The volume turns down step by step.

Step up : The volume turns up step by step.

6


Use  to adjust the volume and press  [Select].

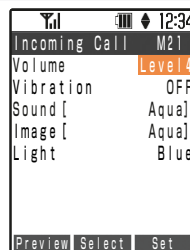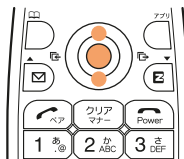

7

Press  [Set].

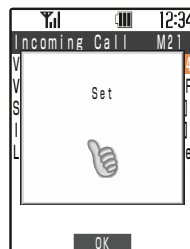

The volume is changed.




Changing the Ringer Type


<Example> Setting the ringer type in “Original”

1


After the step 4 on page 28, use  to select “Sound” and press  [Select].

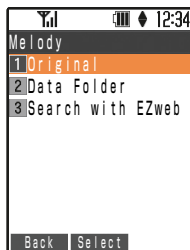


2



Use  to select “Original” and press  [Select].



Ringer list is displayed.

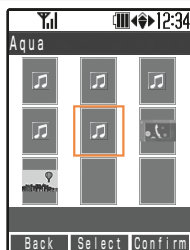- To confirm the selected ringer, press  [Confirm].



3


Use  to select a ringer and press  [Select].

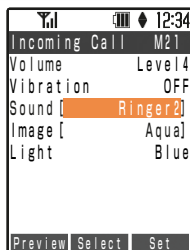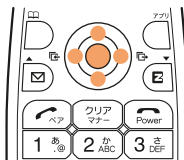

4

Press  [Set].

The ringer is changed.

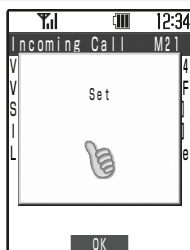


Setting the Silent Mode

When the silent mode is set, your cellphone vibrates to notify you of incoming calls and records the caller's message in the In-Phone Ans Machn when you cannot answer a call.

1

Press **クリア マナー** for more than one second in the standby screen.

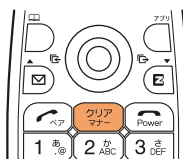

The silent mode is set and **SV** appear in the standby screen.




To Release the Silent Mode

1

Press **クリア マナー** for more than one second while setting the silent mode.

SV disappear from the standby screen.

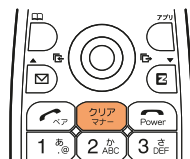


Using the In-Phone Ans Machn

When the In-Phone Ans Machn is set, you can play answering message and record caller's message.

Setting the In-Phone Ans Machn


- 1 Press **メモ** for more than one second in the standby screen.



In-Phone Ans Machn is set and  appears in the standby screen.



To Release the In-Phone Ans Machn


- 1 Press **メモ** for more than one second while setting the In-Phone Ans Machn.
 disappears from the standby screen.



Playing Back the Recorded Messages

When a message is recorded in the In-Phone Ans Machn, the standby screen notifies you.




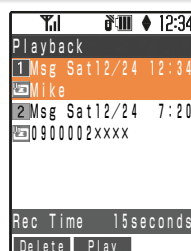
 (Mesgs) and the number of recorded messages are displayed.

1

Use  to select  (Mesgs) and press .

Playback screen is displayed.



- To delete a message, press  [Delete].




2

Use  to select a desired message and press  [Play].

The message is played.

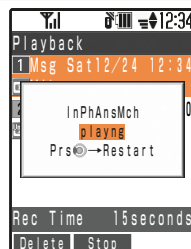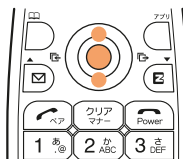

Information

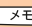
- Up to 3 messages can be recorded, and the available recording time for each message is 20 seconds.
- In-Phone Ans Machn cannot be set when the maximum number of message (including voice memo) is recorded.
- You can also display the playback screen from the standby screen by pressing , and then select "Playback".



Using Overseas


You can use the A5514SA overseas with global functions.

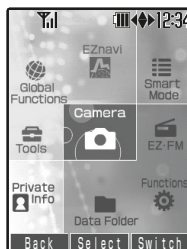

Setting Area (Country)



- 1** Press  in the standby screen.

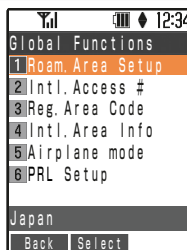


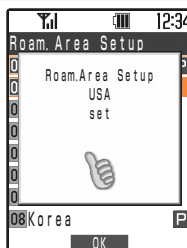
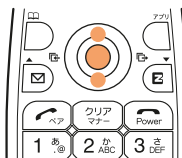
- 2** Use  to select “Global Functions” and press  [Select].



- 3** Use  to select “Roam. Area Setup” and press  [Select].

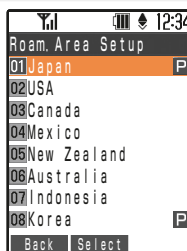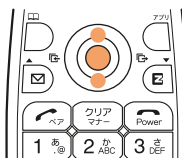

- 4** Use  to select an area (country) and press  [Select].





Calling to Japan from Overseas




1



From the standby screen, enter a phone number and press

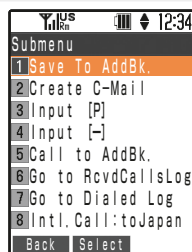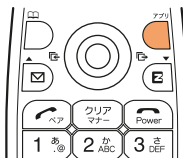 [Submenu].



2

Use  to select “Intl. Call:toJapan”, press , and press .

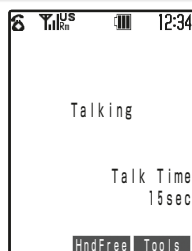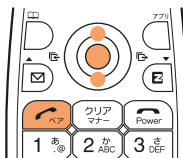

Information


- Although the preferred roaming list (PRL) is already stored in the phone at the time of purchase, the list may be updated several times a year. Update it before departure.
- You can use like a normal cellphone when calling from Japan to an overseas cellphone compatible with GLOBAL PASSPORT.
- You need to sign up for the EZweb service before departure. Initial setting of EZweb must also be done in Japan.

Address Book

Saving to the Address Book

You can save phone numbers to which you call frequently, names, and E-mail addresses.


<Example> Saving a name, phone number and E-mail address

- 1** Press  for more than one second in the standby screen.

Address book registration screen is displayed.



- 2** Use  to select  (Name) and press  [Select].

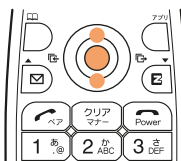


- 3** Enter a name and press  [Set].


- See "Inputting Characters" (p.90) about the way of inputting characters.
- The reading is automatically entered.




- 4** Use  to select  (Phone No.1) and press  [Select].

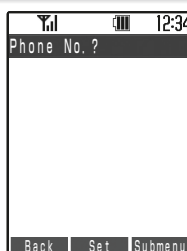

5

Enter a phone number and press  [Set].

- Enter the area code when saving a regular phone number.

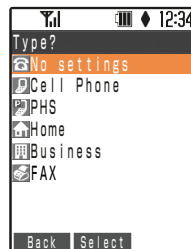


6

Use  to select a type of phone number and press  [Select].


The icon of selected type is displayed.

- If you do not enter E-mail address, go to step 10.

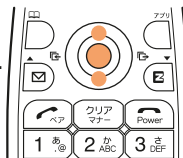


7

Use  to select  (E-Mail Add1) and press  [Select].

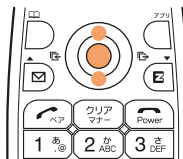

8


Enter an E-mail address and press  [Set].

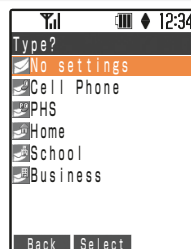

9

Use  to select a type of E-mail address and press  [Select].



The icon of selected type is displayed.

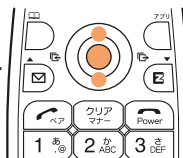

10

Press  [Set].


Pop-up screen which indicates
Memory No. is displayed.

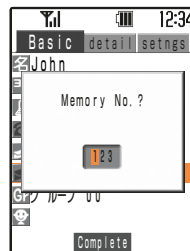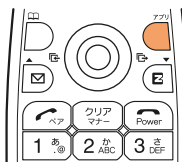

11

Press  [Complete].

Saving to the Address Book is
completed.

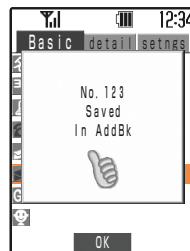

Information


- Up to 1000 entries can be saved.
- You can also save some information such as group, image and address.
- An entry can contain up to 3 phone numbers and 3 E-mail addresses.
- The smallest available memory number from 000 to 999 is automatically assigned. You can assign any number by pressing dial keys.

Making a Call from the Address Book

1


Press  in the standby screen.



Address book list is displayed.

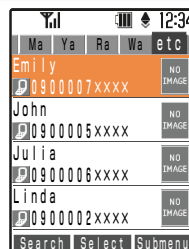

2


Use  to select a person to call and press .

- Use  to select the number 1 to 3 when the entry has some numbers.

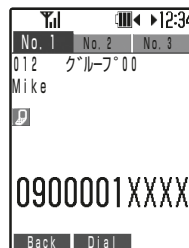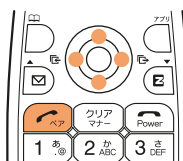




3

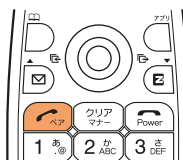Press .





Editing an Entry in the Address Book




1

From the standby screen, press , use  to select an entry to edit, and press  [Select].

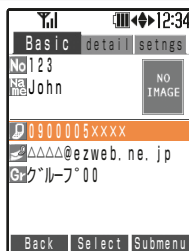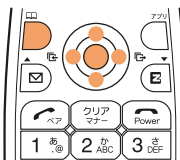
Address book detailed screen is displayed.



2

Press  [Submenu], use  to select "Edit" and press  [Select].



Address book registration screen is displayed.

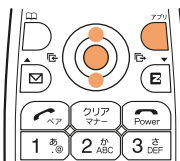

3

Edit the entry and press  [Set].



Yes : Overwrites the entry.
No : Not overwrite the entry.

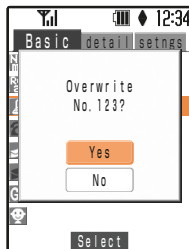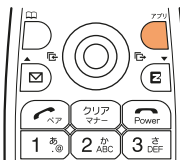

4




Use  to select "Yes" and press  [Select].

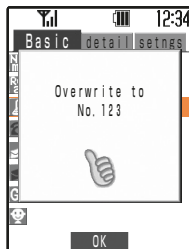
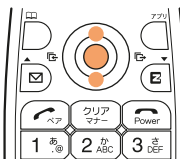
The entry in the Address Book is edited.






Saving from Dialed/Received Log

<Example> Saving from Received log

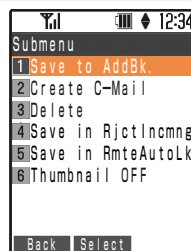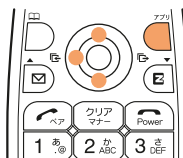- 1 From the standby screen, press , use  to select an entry to save, and press  [Submenu].





- 2 Use  to select "Save to AddBk." and press  [Select].

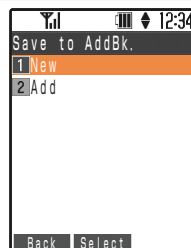


- 3 Use  to select "New" and press  [Select].

Address book registration screen is displayed. The phone number of the selected entry is automatically entered.

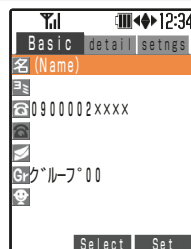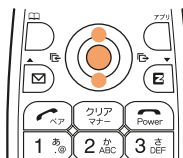

- 4 Refer to "Saving to the Address Book" (p.36) to save the entry.

Information

- To save from Dialed log, press  in the standby screen and follow the steps above.


Pair Function




Setting a Pair Person


You can select 5 persons from saved entries in the Address Book and set them as pair persons. This function allows you to call or send mail easily to them.

1 Press  in the standby screen.

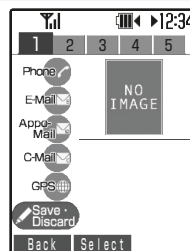Pair menu is displayed.



2 Use  to select a number, use  to select “Save · Discard”, and press  [Select].

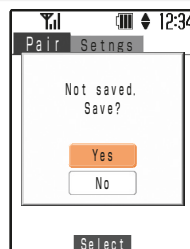

3 Use  to select “Yes” and press  [Select].




4 Use  to select a person, press  [Select] and press  [Set].

Information


- Pair persons can be selected from the Address Book. Save a person to the Address Book before setting him/her as pair person. See “Saving to the Address Book” (p.36) for details.
- If you delete a pair person from the Address Book, the person is also deleted from Pair menu.


Making a Call to a Pair Person

1




Press  in the standby screen.


Pair menu is displayed.

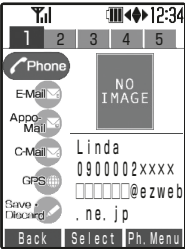




2

Use  to select a person to call,
use  to select “Phone” and
press  [Select].





Information

- You can also send E-mail and C-mail.

Mail

About E-mail (Subscription to EZweb required)

To use E-mail, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using E-mail for the first time. See “Initial Setting for E-mail and EZweb” (p.20) about the initial setting.

E-mail allows you to exchange mails of up to 5000 full-sized (or 10000 half-sized) characters with other cellphones or personal computers that support E-mail. Photos and movies can also be sent and received.

- * You can send E-mail to up to 5 recipients at a time.
- * You can send up to 1000 E-mails (or to up to 1000 recipients) in a day.
- * Sending or receiving mails with attached file may take more time than usual, depending on its size or radio wave condition.

E-mail is sent using an E-mail address.
(Ex.) $\triangle\triangle\triangle@ezweb.ne.jp$

Send



E-mail can be sent to other
cellphones or personal
computers that support E-mail.



A5514SA



Creating and Sending an E-mail

1

Press  in the standby screen.


E-Mail Menu is displayed.



2

Use  to select “Create New” and press  [Select].


Create Mail screen is displayed.

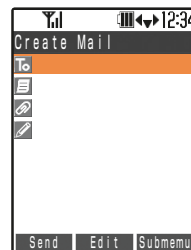



3

Use  to select **To**, press  [Edit] and press  [Edit].

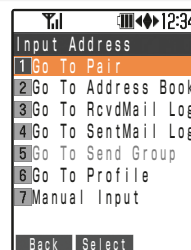Input Address screen is displayed.



4


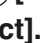

Use  to select “Go To Address Book” and press  [Select].

Address book list is displayed.




- Input Address screen also allows you to enter an E-mail address manually or select it from Received Mail Log or Sent Mail Log.

5


Use  to select a recipient, press  [Select] and press  [Select].

- Use  to select  1 to 3 when the entry has some E-mail addresses.

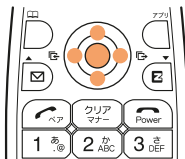


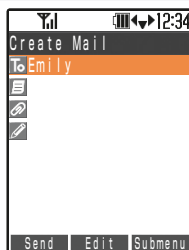
6

Press  [Finish].

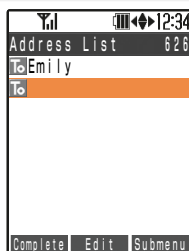




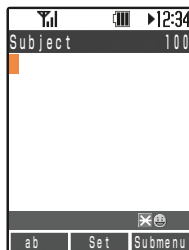
7

Press  [Complete].
E-mail address is entered.




8


Use  to select  and press  [Edit].
Subject input screen is displayed.



9

Enter a subject and press  [Set].
The subject is entered.



- See "Inputting Characters" (p.90) about the way of inputting characters.
- Subject can use up to 50 full-sized (or 100 half-sized) characters.

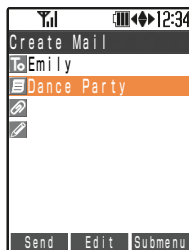

10

Use  to select  and press  [Edit].

Body text input screen is displayed.

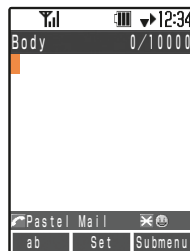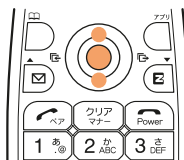


11

Enter a body text and press

 [Set].


Body text is entered.

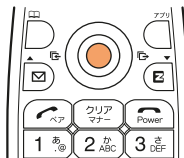

12



Press  [Send].

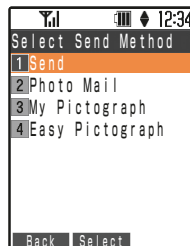Select Send Method screen is displayed.




- See “Using Photo Mail” (p.61) about sending a Photo Mail.
“My Pictograph” and “Easy Pictograph” are pay services. You must subscribe separately for “Pictograph Mails” service.

13

Use  to select “Send” and press  [Select].

Created mail is sent.

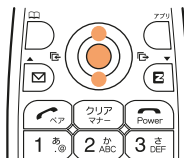

- After finished sending, the mail is saved in Outbox as sent mail.

Reading a Received E-mail

When an E-mail is received, the standby screen notifies you.




(E-Mail) and the number of E-mail are displayed.

1

Use to select (E-Mail) and press .

Inbox screen is displayed.


- The color is changed and with the number of E-mail is displayed when the folder has a new mail.

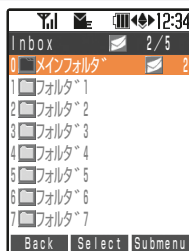

2

Use to select “メインフォルダ” (Main folder)” and press [Select].

Received mail list is displayed.

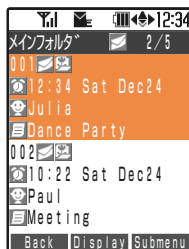


3


Use to select a mail and press [Display].

Received mail is displayed.

- To display a previous or next mail, press or .

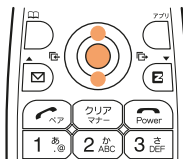


How to view a received mail

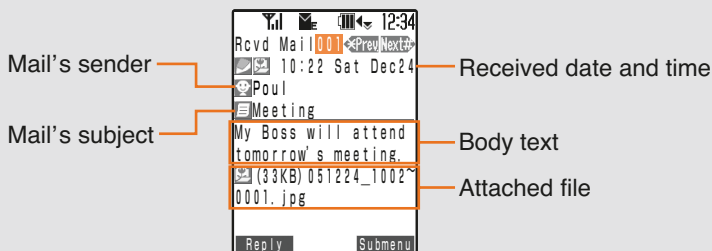

Displaying an E-mail in Inbox


- 1 From the standby screen, press , use to select "Inbox", and press [select].
Inbox screen is displayed.

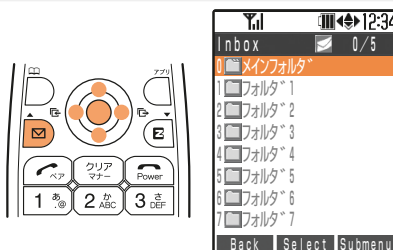

- 2 Follow the steps 2 to 3 on page 48 to display a mail.

When a Photo or Movie Is Attached in a Received Mail

- 1 Display a received mail, use to select a file name which appears after the body text, press [Receive] , and press [Play].
Attached file is played.

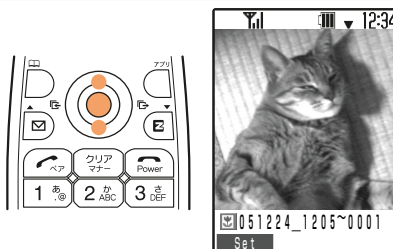

Information

- Depending on the file size, some photos or movies may be displayed automatically or by selecting the attached file and pressing [Play].

Replying to a Received E-mail

1

After the step 3 on page 48, press **D** [Reply].


Create Mail screen is displayed. The recipient is entered and the subject and body text of the received mail is quoted.



- Subject is prefixed with "Re:".
- Subject can be edited.

2


Use **OK** to select **Edit**, press **OK** [Edit], enter a body text, and press **OK** [Set].

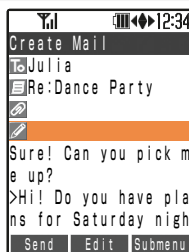

3

Press **D** [Send].

Select Send Method screen is displayed.

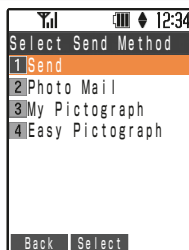

4

Use **OK** to select "Send" and press **OK** [Select].


Created mail is sent.









Blocking Junk Mail


Using E-mail, you may receive mails from unknown persons, or unwanted solicitation mails which are called “Junk Mail”. The following ways are available for preventing arrival of junk mail.

Mail Filter

Press  in the standby screen.

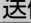- ▶ Select “E-Mail Settings” and press  [Select]
- ▶ Select “Other Settings” and press  [Select]
- ▶ Select “メールフィルター(Mail filter)” and press  [OK]
- ▶ Enter your lock code and press  [Set]
- ▶ Select  (Send) and press  [OK]

Mail filter main screen

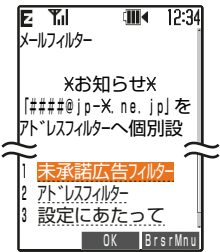

Mail filter main screen is displayed.

*Lock code is the 4-digit number you wrote in the application form when purchasing.

The mail filters are “未承諾広告フィルター (Unsolicited Ad Mail Filter)” and “アドレスフィルター (Address Filter)”.

- “未承諾広告フィルター (Unsolicited Ad Mail Filter)”
Rejects mails that contain “未承諾広告※ (Unsolicited Ad)” in the title.
- “アドレスフィルター(Address Filter)”

全受信	Receives all E-mails.
指定受信設定	Receives only the E-mails whose domains are specified in “一括指定” or whose domains or addresses are specified in “個別指定” .
指定拒否設定	Rejects E-mails whose domains or addresses are specified.
なりすまし規制	By setting “規制する(Regulate)”, rejects E-mails sent from a personal computer with cellphone or PHS E-mail address.

Change E-mail Address

You can also prevent arrival of junk mail by changing your E-mail address.


About C-mail

If you purchased your phone in Kanto or Chubu regions, you need not subscribe separately to use C-mail. If you purchased outside Kanto and Chubu regions, a separate subscription is required. Please contact au Customer Service Center or au shop if you did not subscribe at the time of purchase.

C-mail allows you to exchange mails of up to 50 full-sized (or 100 half-sized) characters with other au cellphones that support C-mail.


* C-mail Safe Block Function



C-mail safe block function allows you to reject C-mails that include URL to access(<http://>,<https://>) or phone numbers in the C-mail body text. This function is valid by default.

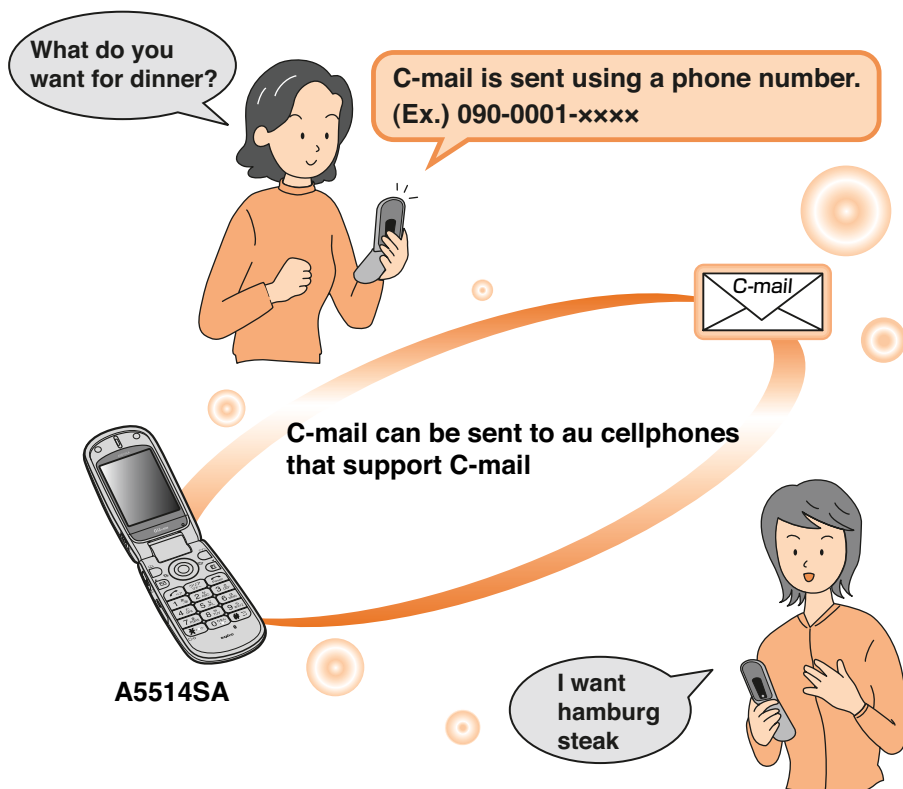



Creating and Sending a C-mail


1

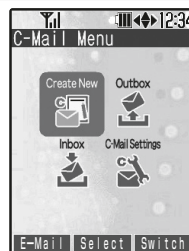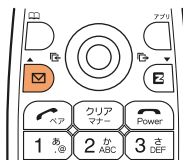Press  for more than one second in the standby screen. C-Mail Menu is displayed.







2

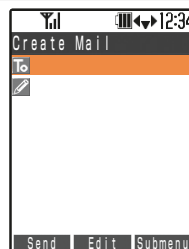Use  to select “Create New” and press  [Select]. Create Mail screen is displayed.




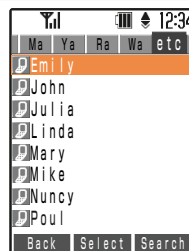
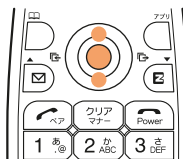
3

Use  to select **To** and press  [Edit]. Input Address screen is displayed.

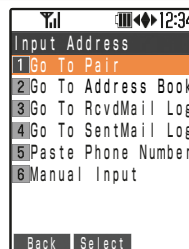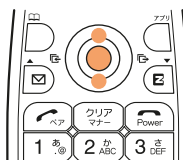



4



Use  to select “Go To Address Book” and press  [Select]. Address book list is displayed.




- Input Address screen also allows you to enter an address manually or select it from Received Mail Log or Sent Mail Log.

5

Use  to select a recipient and press  [Select].

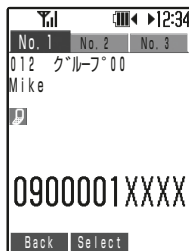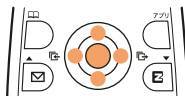

- Go to step 7 when the entry has only one phone number.
- Use  to select the number 1 to 3 when the entry has some phone numbers.

6


Press  [Select].



7

Use  to select  and press  [Edit].

Body text input screen is displayed.

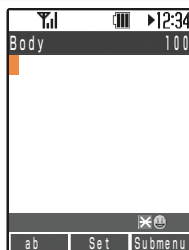

8

Enter a body text and press  [Set].

Body text is entered.

- See "Inputting Characters" (p.90) about the way of inputting characters.



9

Press  [Send].


Created mail is sent.


- After finished sending, the mail is saved in Outbox as sent mail.



Reading a Received C-mail

When a C-mail is received, the standby screen notifies you.


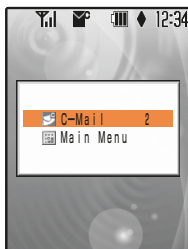





 (C-Mail) and the number of E-Mail are displayed.

1

Use  to select  (C-Mail) and press .

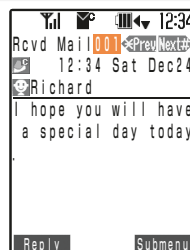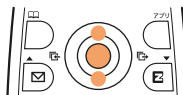


Received mail is displayed.




- The newest mail is displayed when you have some new mails.
You can display a previous or next mail by pressing  or .
- To reply to the sender, press  [Reply].

Displaying a C-mail in Inbox

1

From the standby screen, press  for more than one second, use  to select "Inbox", and press  [Select].
Inbox screen is displayed.

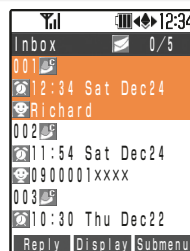

2



Use  to select a mail and press  [Display].

Camera

What You Can Do with the Camera


Take photos and movies

You can take photos and movies with this 1.31-megapixel camera.

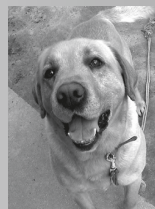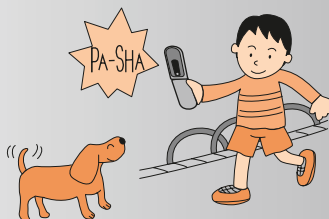

Edit

You can edit taken photos or movies as you like, by adding words or images on them.

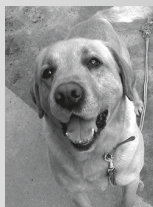

Edit



Register

You can set taken photos as the standby screen, or register them to the Address Book to display when you receive incoming calls.


Incoming Call

When a photo is registered to the Address Book



Send by E-mail

You can attach photos and movies of less than 500 KB to E-mail and send them to other cellphones or personal computers.

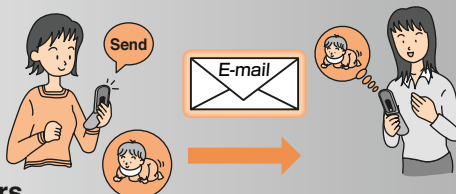


* It may take more time than usual, depending on radio wave condition.


How to Hold Your Cellphone When Shooting

When you take photos or movies, put the subject inside the screen and hold the cellphone firmly with both hands to prevent a blur.

When shooting with a vertical screen

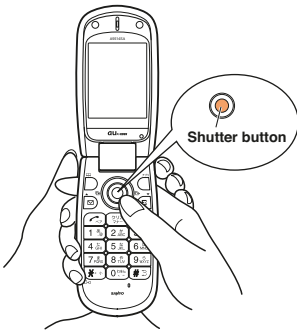


When shooting with a horizontal screen

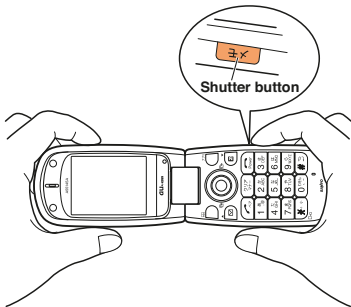

About Data Size

You can select the mode for taking photo or recording movies. The following table shows the data size for each mode.

Mode for taking photo

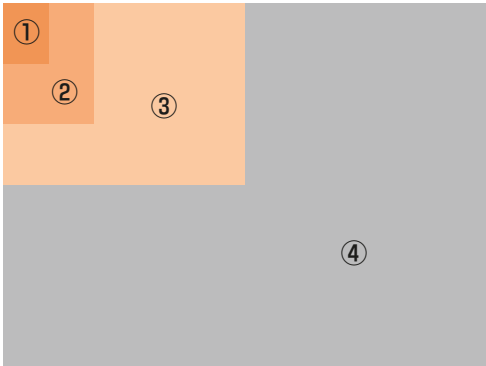

Mode for recording movie






①	QQVGA size	120×160 dot size
②	QVGA size	240×320 dot size
③	VGA size	640×480 dot size
④	SXGA size	1280×960 dot size
⑤	Small size	96×80 dot size
⑥	Medium size	128×96 dot size
⑦	Large size	176×144 dot size

* ② is the same size as the main display of A5514SA.


* The default value is ② for the mode for taking photo, and ⑦ for the mode for recording movie.

Taking a Photo

1

From the standby screen, press , use  to select “Camera”, and press  [Select].

Camera functions are displayed.

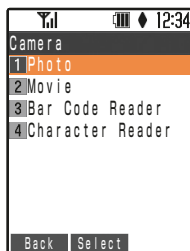

2

Use  to select “Photo” and press  [Select].


- To switch to movie, press  [Movie].



3

Press  [Shoot].

Shutter sounds and taken photo is displayed.

- To clear the photo, press .



4

Press  [Save].

Taken photo is saved.

- The title of taken photo means as follows:

051224_1234~0001

Date: Dec 24, 2005



Time: 12:34

Number: 0001




Recording a Movie

1


After the step 1 on page 58, use  to select "Movie" and press  [Select].

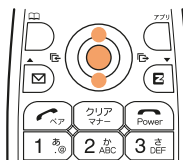


- To switch to photo, press  [Photo].



2

Press  [Rec.].

Shutter sounds and starts recording. Recording is finished after 15 seconds or by pressing  [Stop] while recording.

- To cancel and start recording again, press  [Cancel].
- To cancel the recorded movie, press .
- After finished recording, you can confirm the recorded movie by pressing  [Submenu] and selecting "Play".



Camera

3

Press  [Save].

Recorded movie is saved.

- The title of recorded movie means as follows:

051224_1234~0001




Date: Dec 24, 2005	Time: 12:34	Number: 0001
--------------------	-------------	--------------




Viewing Photos or Movies

<Example> Viewing a taken photo

1

From the standby screen, press , use  to select “Data Folder”, and press  [Select].

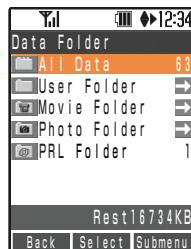


2

Use  to select “Photo Folder” and press  [Select].

Photo Folder list is displayed.

- All photos are saved in “All Photo”.

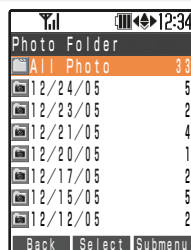

3





Use  to select a folder which contains a photo to view, and press  [Select].


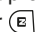
Photo list is displayed.



4

Use  to select a photo and press  [Play].


Selected photo is displayed.

- To display a previous or next photo, press  or .




Sending Photos or Movies by E-mail

1

After taking a photo (follow the steps 1 to 3 on page 58) or recording a movie (follow the steps 1 to 2 on page 59), press  [E-Mail].

Create Mail screen appears with a taken photo or recorded movie attached.

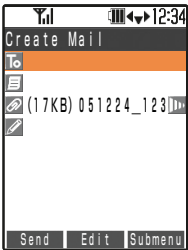

2

Follow “Creating and Sending an E-mail” (p.45) and send E-mail.

Information

- Sending E-mail may take more time than usual, depending on radio wave condition.

Camera

Using Photo Mail

You can use this function to automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using au cellphone.

1

After the step 12 on page 47, use  to select “Photo Mail” and press  [Select].

The other party’s E-mail address is automatically changed and E-mail is sent.



If you select “Photo Mail”, the other party’s E-mail address is automatically changed (as shown below) before sending.

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@□*.vodafone.ne.jp	△△△@□*.vodafone.nepm.jp
TU-KA and au cellphones that do not support Movie Mail	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

*□ differs depending on the area where the other party subscribed.

EZweb (Subscription to EZweb required)


About EZweb

To use EZweb, you need to subscribe to the EZweb service. If you did not subscribe it when you purchased your phone, please contact au Customer Service Center or au shop for further information. Make sure that you do the initial setting before using the EZweb for the first time. See “Initial Setting for E-mail and EZweb” (p.20) about the initial setting.

EZweb is an information service for enjoying the Internet on your cellphone. You can obtain Chaku-Uta® and the latest news from information sites.

* Some information sites are subject to additional information costs besides communication costs.

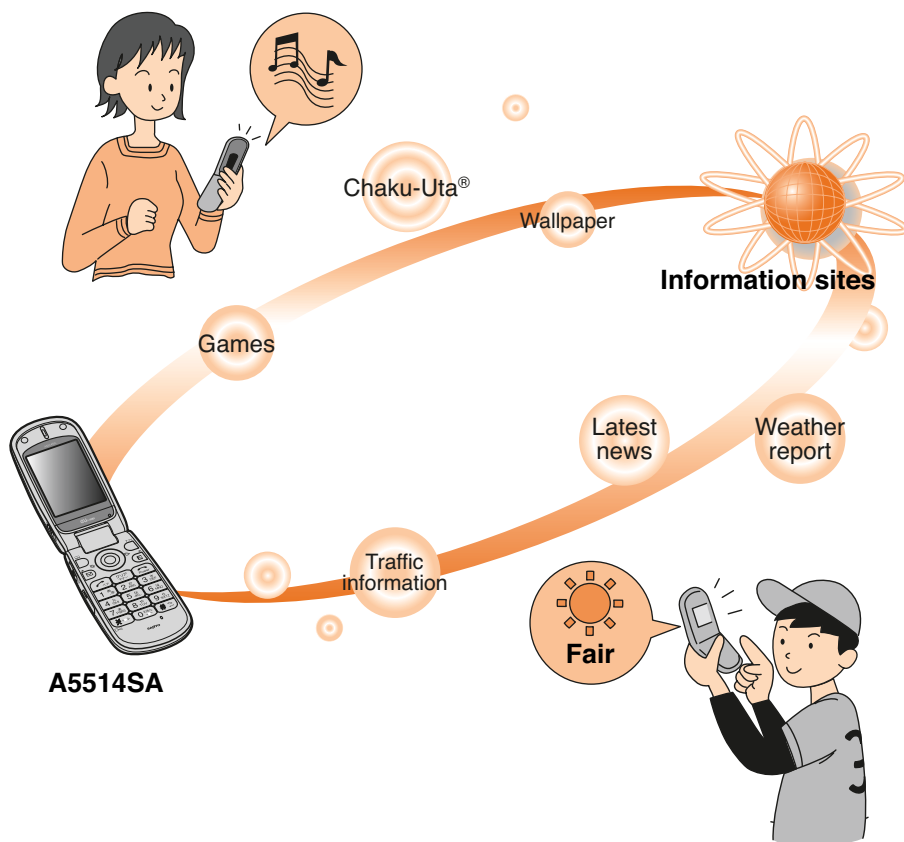


EZweb



 
Accessing Sites

Displaying the EZ Top Menu


1

From the standby screen, press , use  to select “Top Menu”, and press  [Select].

EZ Top Menu is displayed.



EZ Top Menu

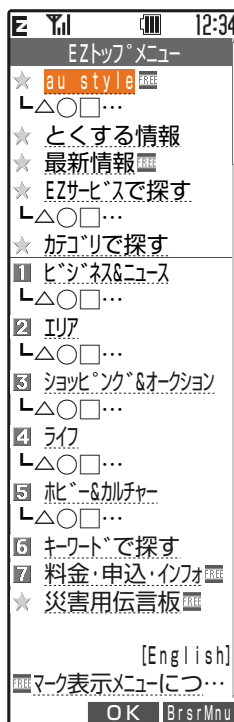

au style

Introduces au-recommended information and sites.

とくする情報 (Valuable Information)

Offers gifts and free valuable information to EZweb service subscribers.

最新情報 (Latest information)

Introduces new topics and daily information such as weather and fortunetelling.

EZサービスで探す (Search by EZweb service)

Introduces useful and new recommended services special to EZweb.

カテゴリで探す (Search by category)

Searches for news or whether sites by category.

ビジネス&ニュース (Business & News information)

Provides the latest information such as news, weather, stock prices, and other information beneficial for business.

エリア (Regional information)

Provides weather reports, maps, and other local information.

ショッピング&オークション (Shopping & Auction information)

Provides information about shopping malls where you can purchase goods with your cellphone and auctions where you can put up or go for easily.

ライフ (Check useful daily life information)

Provides information beneficial for daily life.

ホビー&カルチャー (Hobby & Culture information)

Provides the latest information about games, fortunetelling, music, and information on hobby and entertainment trends.

キーワードで探す (Search by keyword)

Searches for a site by keyword.

料金・申込・インフォ (Charges, application and information)

Provides phone bills, application forms, au online manuals, and au information.

災害用伝言板 (Disaster Message Board)

You can register or confirm the safety information in disasters.

English




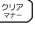

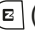
Introduces English sites

EZweb


Information

- The display layout and contents show an example and may differ from the actual screen.

Basic Operation while Using EZweb


- You can display the next screen by using  to select an item and pressing .
- You can return to the previous screen by pressing  or  (フリック), and you can go back to EZ Top Menu by pressing it for more than one second.
- You can scroll the screen by pressing  (Up) or  (Down) when it continues.



EZ Top Menu

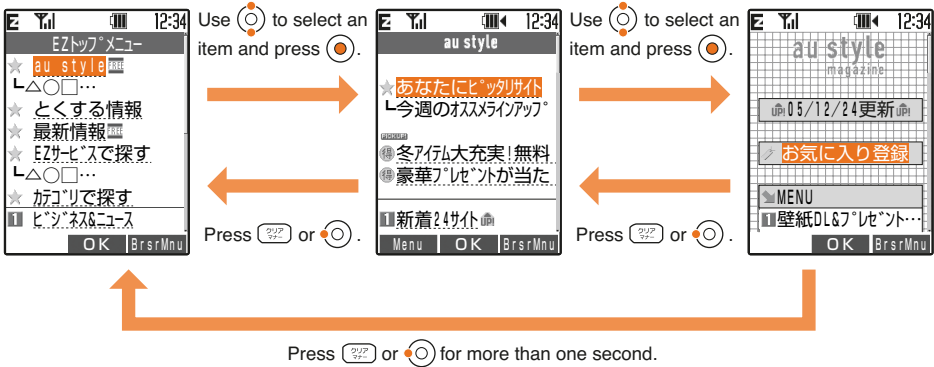




Downloading Chaku-Uta® and Set It as a Ringer for Incoming Calls

You can download Chaku-Uta® from information site and set it as a ringer for incoming calls. You can also download wallpaper and set it to the standby screen and others.

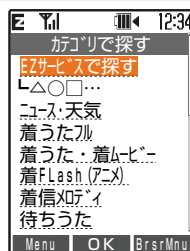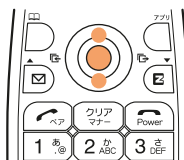
- 1 From EZ Top Menu, use  to select “カテゴリで探す (Search by category)” and press  [OK].



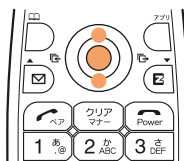


- 2 Use  to select “着うた・着ムビ-” and press  [OK].

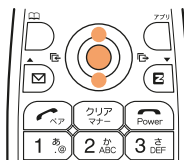

- 3 Use  to select a category and press  [OK].



- 4 Use  to select an information site, press  [OK], and download following the on-screen instructions.

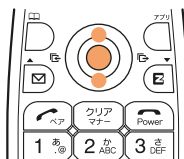

5

Press  [Play].


Downloaded data is played.



6

Press  [Set].



Select Set Target screen is displayed.

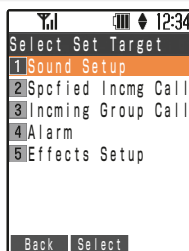

7

Use  to select "Sound Setup" and press  [Select].


Registration destinations of the selected target are displayed.

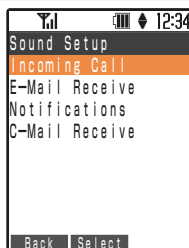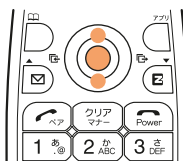

8

Use  to select "Incoming Call" and press  [Select].

 Downloaded data is set as ringer for "Incoming Call".



Information


- You must input your EZ password or Premium EZ password when the additional information cost is charged to use the site. Follow the on-screen instructions and input your password when you use it for the first time. Write down your password in order not to forget it.
- Download procedure depends on the site. The procedure described above shows an example and may differ from the actual one.

Registering Frequently-Accessed Sites



You can access information sites easily by registering frequently-accessed sites to “Favorite Site”.

Registering to Favorite Site



1

Display a site you want to register and press  [BrsrMnu].

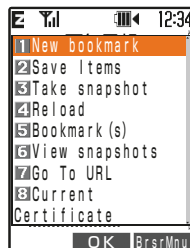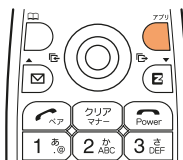Browser menu is displayed.





2

Use  to select “New bookmark” and press  [OK].

The title, URL, and folder name are displayed.


- Some sites may not be registered to Favorite Site.

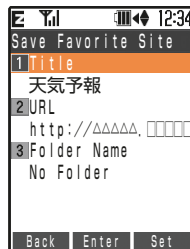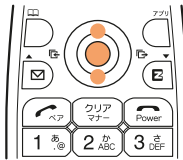

3

Press  [Set].

The site is registered to Favorite Site.

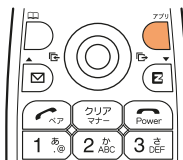

Information

- Up to 100 sites can be registered in Favorite Site.

Viewing a Site Registered to Favorite Site

1

Press  in the standby screen.


EZ Menu is displayed.





2

Use  to select "Favorite Site" and press  [Select].

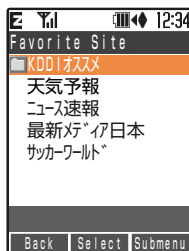
Favorite site list is displayed.



3

Use  to select a site you want to view and press  [Select].



You are connected to the selected information site.

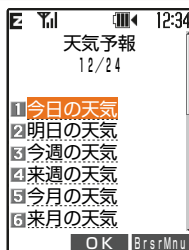



Inquiring Toll



1

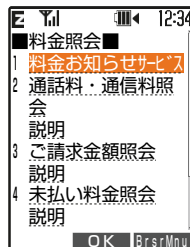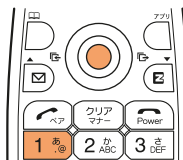From the standby screen, press    in turn.



2

Use  to select a menu you want to confirm and press  [OK].

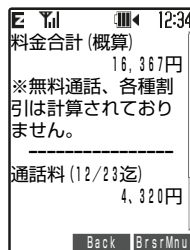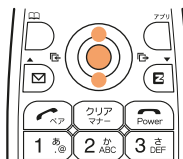

Information

- The on-screen call or communication charge should be used only as a guide.

EZnavi (Subscription to EZweb required)

What You Can Do with EZnavi

EZnavi is a useful service which provides you with position information (GPS information). You can use “EZ Navi Walk” which navigates you to a destination, “Position Search” which informs you of the current position of your kid, and “Area Message” which lets you know when your kid enters a (or goes outside) preset area.


Standby screen


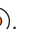


Press .




Main Menu

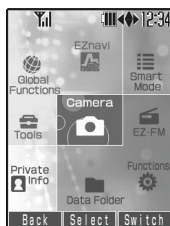

Use  to select “EZnavi” and press .




EZnavi Menu

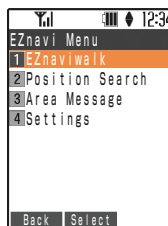


“Position Search” allows you to confirm the current position of your kid

This service allows you to confirm with your A5514SA the current position of other au cellphones that support Position Search. “位置確認メール(Position Search Mail)” (charge-free) allows you to send a message to the other au cellphone to ask the position. “いつでも位置確認(Auto Position Search)” (charged) allows you to confirm the position of the other au cellphone without any operation on the other’s cellphone.

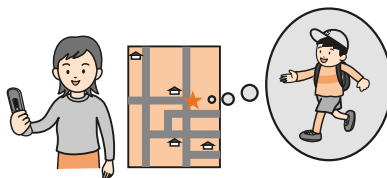

“Area Message” lets you know when your kid enters a (or goes outside) preset area


When your kid enters a (or goes outside) preset area during a specified period of time, a message with alarm is sent automatically from his/her cellphone to your cellphone.

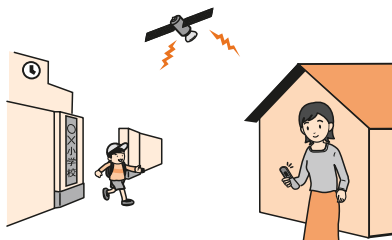


“EZ Navi Walk” is useful when you go out

Various useful menus can be displayed when you go out.

EZ Navi Walk Menu

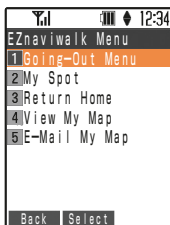

Going-Out Menu

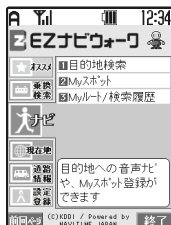


オススメ	The latest news and recommended information *“おためしナビ” provides a demo of voice navigation.
乗換検索	Searchable source of train transfer and timetable information
ナビ	Voice navigation to a destination and “My Spot” registration
現在地	Searchable source of maps, shops, and others of your current position
道路情報	Searchable source of real-time Japan-wide traffic Information
設定登録	Setups, membership registrations and others

My Spot



Just register the position of your home and favorite places (office, friends' houses, shops, etc.) for easy navigation when you go out there.

Return Home

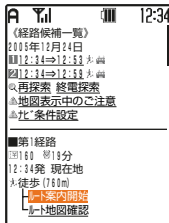

Simply preset the position of your home for easy navigation when you go home. Also, it is useful for checking train transfers and estimated time of arrival.

View My Map



When you are in an unfamiliar place or when you lose your way, simply select “View My Map”. A map around your current position is displayed in real-time.

E-Mail My Map



You can send a map around your current position by E-mail to other person, who can use the map to navigate you.

What You Can Do with Security Navi


What You Can Do with Position Search

You can easily confirm the current position of your kid in a map when he/she has not come home yet and you are worried about if he/she got lost. There are two kinds of Position Search: “位置確認メール(Position Search Mail)” and “いつでも位置確認(Auto Position Search)”.

Position Search Mail

This function allows you to send a message to your kid, who can let you know his/her current position after confirming your message.


<Example> When a mother sends a message to her kid

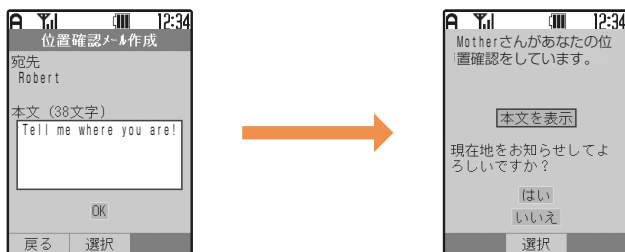

Auto Position Search

This function lets you know the current position of your kid without any operation on his/her phone. It is recommended for kids who are not good at using cellphones.

<Example> When a mother sends a message to her kid

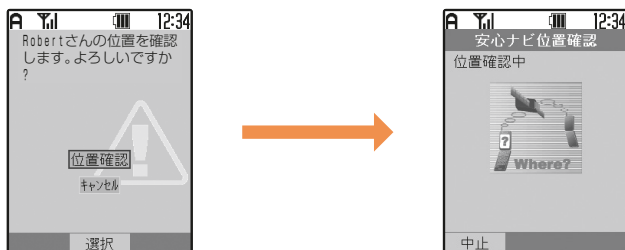


What You Can Do with Area Message

When your kid enters a (or goes outside) preset area during a specified period of time, a message with alarm is sent automatically from his/her cellphone to your cellphone.

Area Message

You can set your mind at ease without worrying about your kid when he/she is coming from after-school activities. When he/she enters a preset area, a message is sent automatically from his/her cellphone to your cellphone.

<Example> When a mother confirms an area where her kid is

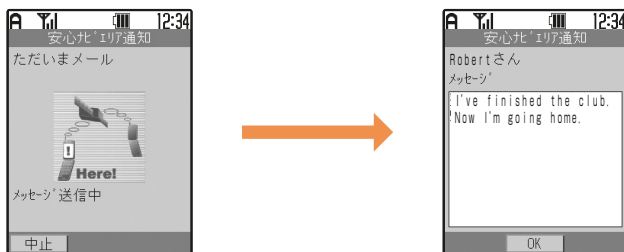

Information

- “Security Navi” service can only be used between supported models.
- You may be charged packet communication fee to obtain a position information or display a map.
- It is necessary to set a password before using “Security Navi”.
- Position Search cannot be performed when the other cellphone is under the following conditions: Out of service area/Setting reject function/Without the application/Operating/Not supported model.
- “Security Navi” cannot be used when you or the other person is suspending the use of C-mail.
- The display layout and contents show an example and may differ from the actual screen.
- Family discount for C-mail and packet communication fee does not apply to the message fee for this service.


EZ・FM (Subscription to EZweb required)

You can use the A5514SA as FM radio.

How to Use the EZ・FM


Connecting SANYO Flat-type Stereo Earphones 04



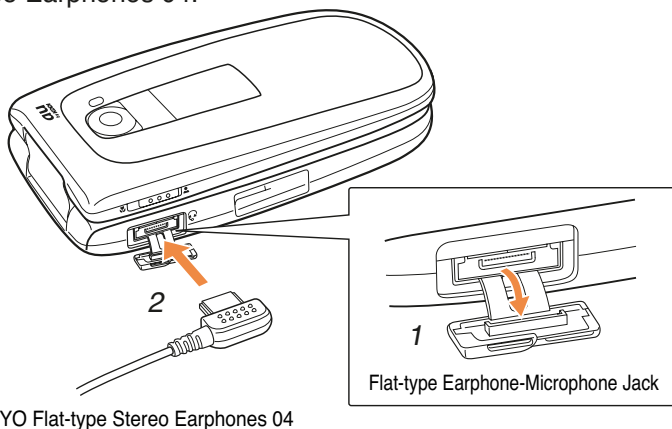

Open the cover of Flat-type Earphone-Microphone Jack and connect SANYO Flat-type Stereo Earphones 04.

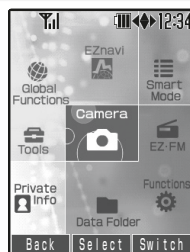

Listening to the EZ・FM

1 Press  in the standby screen.






2 Use  to select “EZ・FM”, press  [Select], use  to select “確認(Confirm)”, and press .

The EZ・FM screen is displayed.
The first time you use the EZ・FM,
a screen to select an area is displayed.
Select an area where you use.



How to Operate

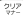● EZ・FM screen


Press , use  to select an item and press .




Connection to the EZ・FM

- Pressing it connects to the EZ・FM sites.

Frequency


- Pressing  tunes the frequency.
To tune automatically, press it for more than one second.




NOW ON AIR information

- Normally, a station name is displayed.
- Pressing  displays information such as an artist name and song name.

*Information is not displayed in some stations.




● Volume Adjustment

Pressing  adjusts the volume.


	Turn up the volume
	Turn down the volume
 (More than 1 sec.)	Mute

Suspending/Ending the EZ・FM

1

Press , use  to select
“Suspend” or “End”, and
press  [Select].

Pressing “Suspend” turns the
EZ・FM screen off, but you can
continue listening to the EZ・FM.

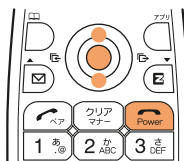

Information

- Make sure that you do the initial setting before using the EZ・FM. See “Initial Setting for E-mail and EZweb” (p.20) about the initial setting.
- You can listen to the EZ・FM at no charge. You are charged packet communication fee to use services such as NOW ON AIR.
- The display layout and contents show an example and may differ from the actual screen.


Infrared Communication

About Infrared Communication

This function allows you to exchange data in the Address Book and Profile, or photos and movies in Data Folder among au cellphones that support the infrared communication function.

When Making Infrared Communication...

To make infrared communication, ensure that the receiver gets ready before the sender sends data. Approximate both cellphones within 20 cm, keep their infrared ports face to face, and do not move them.

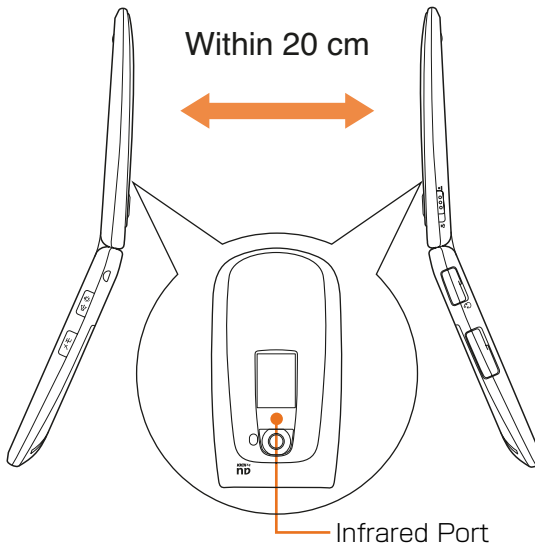

Data available for sending and receiving by infrared communication

- | | |
|----------------|------------------------------|
| ● Address Book | ● Journal |
| ● Profile | ● Favorite Site |
| ● Schedule | ● Data in Data Folder |
| ● Task | (Photos, movies, and others) |


Using Infrared Communication

Receiving Data



<Example> Receiving one data



1

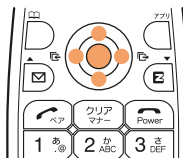From the standby screen, press , use  to select “Tools”, and press  [Select].



2



Use  to select “Rem Cont/Infrared” and press  [Select].

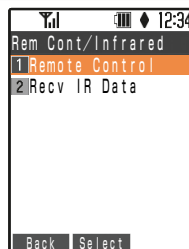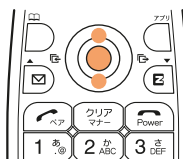



3

Use  to select “Recv IR Data” and press  [Select].

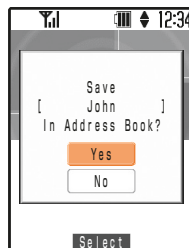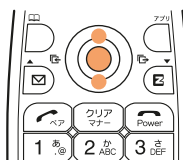
Data is received.



4

After receiving data, use  to select “Yes” and press  [Select].

Data is registered.

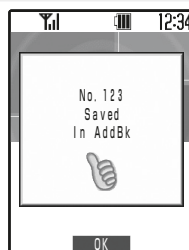


Sending Data

<Example> Sending Profile Data



1

After displaying
Profile (See p.21), press
[Detail].

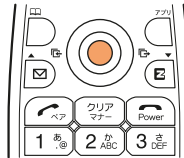



2

Press [Submenu].

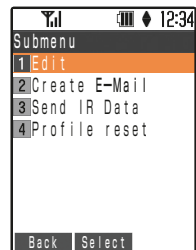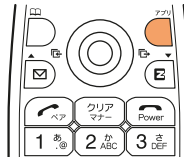

3

Use [Select] to select “Send IR Data”
and press [Select].
Data is sent.

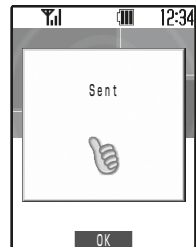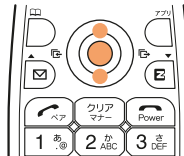

Information

- Copyrighted data cannot be sent or received.
- Some data may not be sent or received depending on the other cellphone even if it supports the infrared communication function.
- Infrared communication may not be made in direct sunlight, under fluorescent light, or near other infrared equipment.
- You may be required to enter authentication password when sending and receiving. Authentication password is the 4-digit number which is arranged in advance between you and the person you communicate with.


Smart Mode

About Smart Mode

Setting Smart Mode allows you to simplify operation to the frequently used functions such as phone function, Address Book, Camera, Mails, and EZweb.


Setting Smart Mode

- 1 Press  in the standby screen.

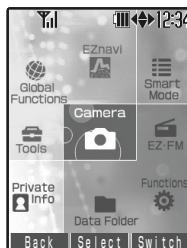



- 2 Use  to select “Smart Mode” and press  [Select].

Confirmation screen is displayed.

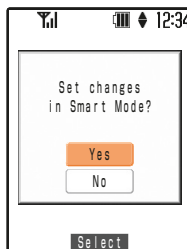


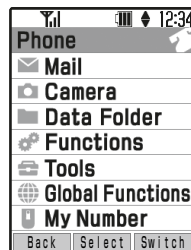
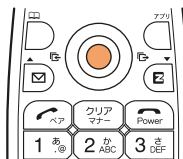
- 3 Use  to select “Yes” and press  [Select].

Smart Mode is set.

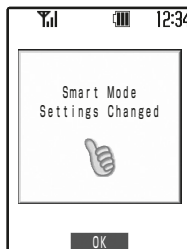
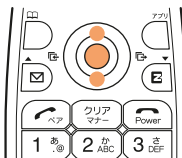




Canceling Smart Mode


- 1 Press  in the standby screen.
Smart Menu is displayed.



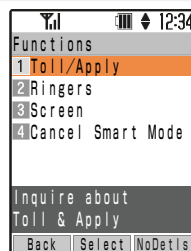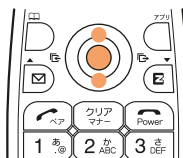


- 2 Use  to select “Functions” and press  [Select].

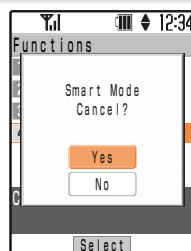

- 3 Use  to select “Cancel Smart Mode” and press  [Select].
Confirmation screen is displayed.



- 4 Use  to select “Yes” and press  [Select].
Smart Mode is canceled.

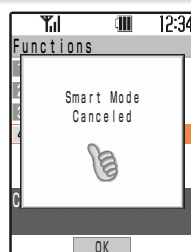


Information

- Setting Smart Mode may change what you have set in normal mode. Some functions inform you of the change by displaying a message.

Screen Display during Smart Mode

Indication in the Standby Screen

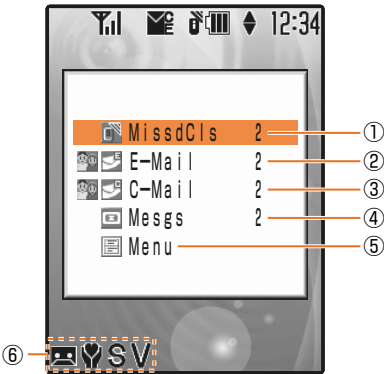


①		Missed Call
②		New E-mail*
③		New C-mail*
④		New memo in the In-Phone Ans Machn
⑤		To Smart Menu
⑥		Silent Mode is ON

* is displayed when you have a mail from pair person.



Displaying Guide

In Smart Mode, a guide of a focused item is displayed at the bottom of the screen. You can turn it on or off by pressing .

With guide

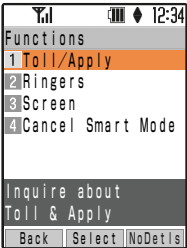

Without guide

 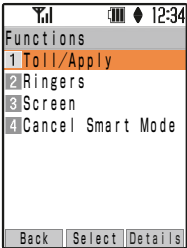

Smart Menu

In Smart Mode, functions are accessed from Smart Menu.

1

Press  in the standby screen.

Smart Menu is displayed.







Phone	Address Book	Save to or search in the Address Book
	Rcvd Calls Log	Display received calls history
	Dialed Log	Display dialed calls history
	In-Phone Ans Machn	Set/Release the In-Phone Ans Machn
Mail	E-Mail	Create E-mail/Confirm sent or received E-mail
	C-Mail	Create C-mail/Confirm sent or received C-mail
Camera	Photo	Take photos
	Movie	Record movies
	Bar Code Reader	Read bar codes (QR codes)
Data Folder	Confirm photos, movies or downloaded data	
Functions	Toll/Apply	Inquire about toll or subscribe to services
	Ringers	Set ringer melody and volume for incoming call
	Screen	Set font size and wallpaper
	Cancel Smart Mode	Cancel Smart Mode
Tools	Calendar	Display calendar
	Alarm	Set/Cancel alarm
	Calculator	Calculator function
	EZ · FM	FM radio function
Global Functions	Roam. Area Setup	Set destination (country)
	PRL Setup	Set roaming area information
My Number	Display your phone number and E-mail address	

Using Smart Mode


Saving to the Address Book


In Smart Mode, you can save names, readings, phone numbers, and E-mail addresses.

1


From Smart Menu, use  to select “Phone”, press  [Select], use  to select “Address Book”, and press  [Select].


Address book list is displayed.







2

Press  [New].

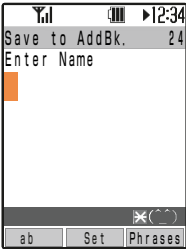


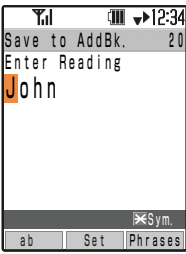


3


Enter a name and press  [Set].

- After entering a name, the reading is automatically entered.








4

Confirm the reading and press  [Set].

The ways of entering phone number are displayed.



- If you do not enter phone number, go to step 6 by pressing  [Next].



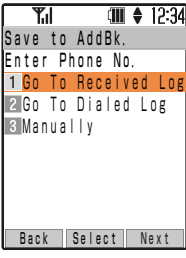


5


Use  to select “Manually” and press  [Select].

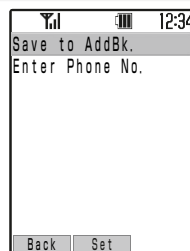
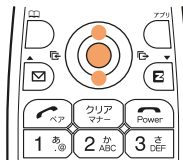


6

Enter a phone number and press  [Set].



The ways of entering E-mail address are displayed.

 - Enter the area code when saving a regular phone number.
- If you do not enter E-mail address, go to step 8 by pressing  [Next].

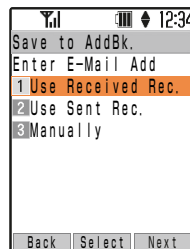

7

Use  to select “Manually” and press  [Select].

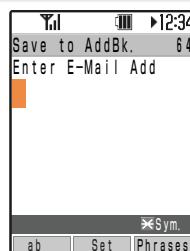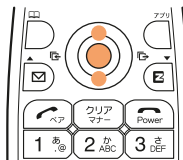


8

Enter an E-mail address and press  [Set].

Address book registration screen is displayed.

- To edit a focused item, press  [Select].

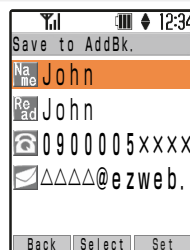



9

Press  [Set].

Saving to the Address Book is completed.



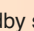

Information


- You can also save from the standby screen by pressing , and then  [New].

Creating and Sending an E-mail

1

From Smart Menu, use  to select “Mail” and press .


Select mail type screen is displayed.

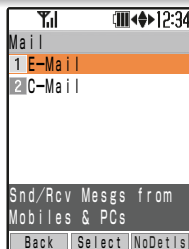

2

Use  to select “E-Mail” and press .


E-mail Menu is displayed.

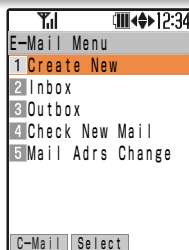



3

Use  to select “Create New” and press .

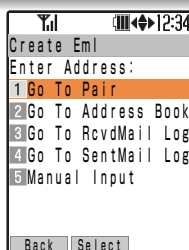Enter Address screen is displayed.





4

Use  to select “Go To Address Book” and press .


Address book list is displayed.



5

Use  to select a recipient and press .

Subject input screen is displayed.

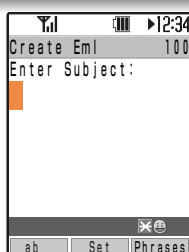


6

Enter a subject and press

 [Set].

Body text input screen is displayed.

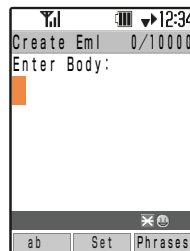




7

Enter a body text and press

 [Set].

Create Mail screen is displayed.


 
- To edit a focused item, press  [Edit].
- To save the created mail in Outbox, press  [Save].



8

Press [Send].


Select Send Method screen is displayed.

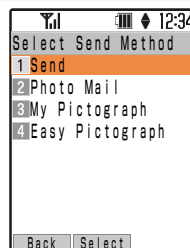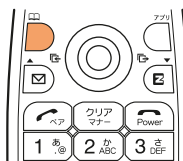



9

Use to select "Send" and press [Select].

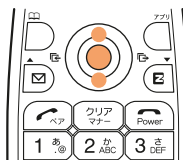Created mail is sent.





Information


- Select mail type screen can also be displayed by pressing  in the standby screen.
- One data of up to 500 KB can be attached.
- In Smart Mode, only one recipient can be selected per E-mail. However, all pair persons can be selected as recipients by displaying Pair menu, selecting "E-mail" and pressing  [SendAll] .



Taking a Photo/Recording a Movie

 
Taking a Photo


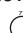
- 1** From Smart Menu, use  to select “Camera” and press  [Select].

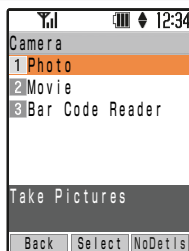Camera functions are displayed.



- 2** Use  to select “Photo” and press  [Select].





- To switch to movie, press  [Movie].
- To change the photo size, press  [Mode].



- 3** Press  [Shoot].

Shutter sounds and taken photo is displayed.



- To clear the photo, press  [Clear].
- To create an E-mail with the taken photo attached, press  [E-Mail].





- 4** Press  [Save].


Taken photo is saved.





Recording a Movie

1

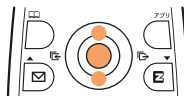After the step 1 on page 88, use  to select “Movie” and press  [Select].




- To switch to photo, press  [Photo].
- To change the movie size, press  [Mode].








2

Press  [Rec.].

Shutter sounds and starts recording. Recording is finished when the maximum record time has passed, or by pressing  [Stop] while recording.



- To cancel recording, press  or .
- After finished recording, you can cancel the recorded movie by pressing .
- To create an E-mail with the recorded movie attached, press  [E-Mail].
- To confirm the recorded movie, press  [Play].



3

Press  [Save].

Recorded movie is saved.



Smart Mode

Inputting Characters


About Inputting Characters

It is necessary to input characters when saving an entry to the Address Book, or creating an E-mail, for instance. Kanji, Hiragana, Katakana, English, numbers, pictograms, emoticons, symbols, and phrases can be inputted.

Changing the Character Input Mode



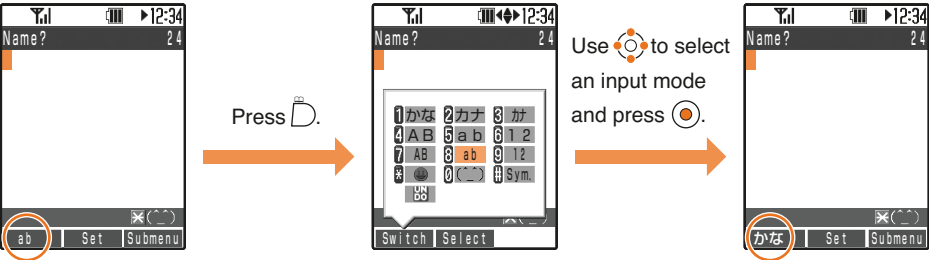

Pressing  in a text input screen displays a list of character input mode.

Text input screen



かな	Kana/Kanji mode	カナ	Full-sized Katakana mode	か	Half-sized Katakana mode
A B	Full-sized and uppercase English mode	a b	Full-sized and lowercase English mode	1 2	Full-sized number mode
A B	Half-sized and uppercase English mode	a b	Half-sized and lowercase English mode	1 2	Half-sized number mode
	Pictograms mode	(^ ^)	Emoticons mode	Sym.	Symbols mode
UN DO	Undo	—	—	Chara	Chara Moji mode

To change input mode...

- Use  to select an input mode and press  [Select].
 - Press  [Switch] to select an input mode and press  [Select].
 - Press a dial key that corresponds with a number in a list of input mode.
- * Some characters cannot be inputted in a text input screen, depending on the function.

The current input mode is displayed at the lower left of the screen while inputting characters. The following shows the types and details of input mode.

	Kana/Kanji mode	Katakana mode	English mode		Number mode
			Uppercase	Lowercase	
Full-sized	かな	カナ	A B	a b	1 2
Half-sized	—	か	A B	a b	1 2

Key Assignment of Characters

Several characters are assigned to one key. Pressing a key repeatedly displays a character you want to input.

Input mode Key	Kana/Kanji (Full-sized)	Katakana (Full-sized/Half-sized)	English (Full-sized/Half-sized)	Number (Full-sized/Half-sized)
1	あいうえおあいうえお1	アイウエオアイウエオ1	. @ _ / : ~ 1	1
2	かきくけこ2	カキクケコ2	a b c A B C 2	2
3	さしすせそ3	サシスセソ3	d e f D E F 3	3
4	たちつてっ4	タチツテトッ4	g h i G H I 4	4
5	なにぬねの5	ナニヌネノ5	j k l J K L 5	5
6	はひふへほ6	ハヒフヘホ6	m n o M N O 6	6
7	まみむめも7	マミムメモ7	p q r s P Q R S 7	7
8	やゆよゃゅょ8	ヤユヨャュョ8	t u v T U V 8	8
9	らりるれろ9	ラリルレロ9	w x y z W X Y Z 9	9
0	わをんわ、。ー〜! ? _ 0	ワョンワ、。ー〜! ? _ 0	O , . - ~ ! ? _	0
	* (Voiced sound symbol) ° (Semi-voiced sound symbol)		_____	✕
	Switch between uppercase and lowercase			
	Switch to a list of pictograms, emoticons and symbols			
	Enter ↵ (Linefeed)			#
	Display candidate words in reverse order while inputting characters (which are not set yet)			

* “〜” can be inputted only when inputting full-sized characters. It changes to “~” when inputting half-sized characters.

* “ワ” (lowercase character) can be inputted only when inputting full-sized characters.

* _ indicates a space.

* Inputting voiced sound symbol/semi-voiced sound symbol or switching uppercase/lowercase can be done by pressing after inputting the character.

(A list of pictograms, emoticons and symbols is displayed if you press it after the inputted character is set.)

Ex.) つ → っ → づ → っ ハ → バ → パ → ハ a → A → a

How to Input Characters

Inputting Kana or Kanji

<Example> Inputting “岡垣” in a name input screen of the Address Book

1

In a text input screen,

press **1** 5 times「お」


press **2** once「か」

○ (makes a cursor move)

press **2** once「か」

press ***** (voiced sound symbol) ...「が」

press **2** twice「き」

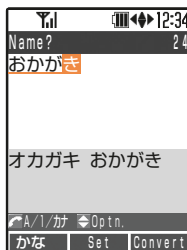


- You can input a character by pressing a key. Pressing a same key repeatedly changes characters in order. Pressing **#** changes characters in reverse order.
- To consecutively input characters assigned to a same key, move the cursor to the right.
- Candidate words are displayed when inputting a character. You can input by selecting a candidate word with **○**.
- When you press **↵** before converting or setting an inputted character, you can change it to a character which may be displayed in number, English, or Katakana mode. However, a space is displayed when there is no corresponding character in number, English, or Katakana mode.

2

Press **↵** [Convert].

“おかかき” is converted to Kanji.



Then pressing **○** displays a list of candidate words.

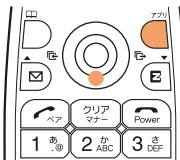

3

Use **○** to select “岡垣” and press **○** [Select].

“岡垣” is inputted.

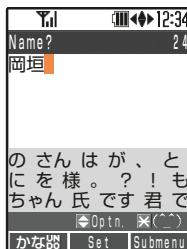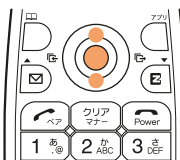

Inputting English Characters

<Example> Inputting “tottori” in an E-mail address input screen of the Address Book

1

In a text input screen,

press **8** ti uv once「t」

press **6** mo 3 times「o」

press **8** ti uv once「t」

 (makes a cursor move)

press **8** ti uv once「t」

press **6** mo 3 times「o」

press **7** po rs 3 times「r」


press **4** gi 3 times「i」



- To consecutively input characters assigned to a same key, move the cursor to the right.
- To input an E-mail address, you can input “@ezweb.ne.jp” by selecting it from phrases. See “Inputting Phrases” (p.94) about inputting phrases.


Characters available for E-mail Addresses



Key	Available characters						
1 <small>po</small>	.	@	-	_	/	:	~
2 <small>mo</small>	a	b	c	A	B	C	2
3 <small>no</small>	d	e	f	D	E	F	3
4 <small>gi</small>	g	h	i	G	H	I	4
5 <small>ji</small>	j	k	l	J	K	L	5
6 <small>mo</small>	m	n	o	M	N	O	6
7 <small>po</small> <small>rs</small>	p	q	r	s	P	Q	R S
8 <small>ti</small> <small>uv</small>	t	u	v	T	U	V	8
9 <small>wo</small> <small>xz</small>	w	x	y	z	W	X	Y Z
0 <small>va</small> <small>yo</small>	0	,	.	-	~	!	?



Characters in  cannot be used for your E-mail address when you change it.

Inputting Phrases



<Example> Inputting “@ezweb.ne.jp” in an E-mail address input screen

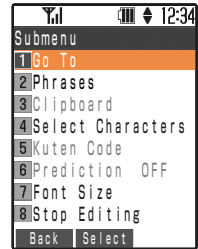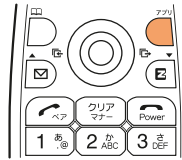

- 1 Press  [Submenu] in a text input screen.



- 2 Use  to select “Phrases” and press  [Select].

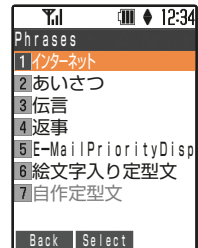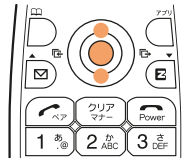Groups of phrases are displayed.



- 3 Use  to select “インターネット(Internet)” and press  [Select].

A list of phrases is displayed.



- 4 Use  to select “@ezweb.ne.jp” and press  [Select].

“@ezweb.ne.jp” is inputted.






Inputting Pictograms, Emoticons and Symbols



<Example> Inputting a pictogram

1

Press  in a text input screen.

A list of input mode is displayed.


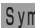
-  ...Pictogram
-  ...Emoticon
-  Sym. ...Symbol

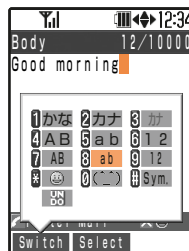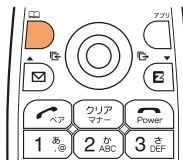





2

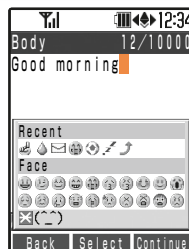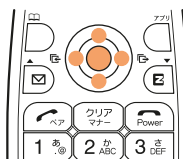Use  to select  and press  [Select].

A list of pictograms is displayed.




- To change categories, press  or .
- To switch between pictograms, emoticons and symbols, press .
- To input consecutively, press  [Continue].



3

Use  to select a pictogram and press  [Select].

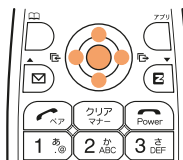

The pictogram is inputted.

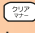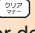

Information

- To delete one character, put the cursor on a character you want to delete and press . To delete several characters, pressing  for more than one second deletes all characters which are at the right of the cursor, or deletes all characters when there is no character at the right of the cursor.

Troubleshooting



Symptom	What to check	Solution	Page
The power cannot be turned on.	Did you press  for more than one second?	Press  for more than one second.	13
	Is the battery pack exhausted?	Charge the battery pack.	12
	Is the battery pack inserted properly?	Insert the battery pack properly.	—
Cannot charge.	Is the cellphone set to the desktop holder properly?	Set the cellphone properly.	12
	Is the connector put in the desktop holder properly?	Put the connector properly.	12
	Is the connector put in the external terminal properly?	Put the connector properly.	12
There is no reaction when pressing a key.	Is the power turned on?	Turn the power on.	13
Calls cannot be made/received.	Is the power turned on?	Turn the power on.	13
	Is “Out” displayed or are you in an area where the reception is bad?	Move to a place where the reception is good.	13
	Did you enter the area code? (when you cannot make calls)	First dial the area code.	24
Ringer for incoming calls does not sound.	Is the ringer volume set to “S(OFF)”?	Adjust the ringer volume.	28
	Is the silent mode set?	Release the silent mode.	31
The caller’s voice cannot be heard/is hard to hear.	Is the earpiece volume set to low?	Adjust the earpiece volume.	27
	Is the reception bad?	Move to a place where the reception is good.	13
Calls are interrupted.	Is the reception bad?	Move to a place where the reception is good.	13
The cellphone answers automatically.	Is the In-Phone Ans Machn set?	Release the In-Phone Ans Machn.	32

Before Losing... (Remote Auto Lock)


Set the operating condition of the remote auto lock in case that you lose the A5514SA. Receiving a specified number of calls from a specified number in a specified time locks automatically your A5514SA, which prevents other person's use.

Setting Remote Auto Lock

1

Press in turn  4  3  2 
from the standby screen and
enter lock code.


- Lock code is set to "1234" at the time of purchase.

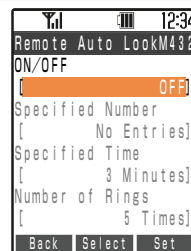

2


Select an item and press  [Select].

ON/OFF

Use  to select "ON" and press  [Select].

Specified Number

Press  [New], enter a phone number and press  [Set]. →  [Back]

- To enter several phone numbers, select "Specified Number", press  [Submenu] and press [New Enter].

Specified Time

Enter time and press  [Select].

- 1 to 10 minutes can be set.

Number of Rings

Enter a number of rings and press  [Select].

- 3 to 10 times can be set.

3

Press  [Set].

Remote auto lock is set.

Locking Automatically by Remote Control

1

Make a call to your A5514SA in accordance with the operating condition you set.

Remote auto lock runs and the guidance is heard.

Information

- Even if the receiver answers when you make a call to set the remote auto lock, it is also counted as Number of Rings.
- Up to 3 phone numbers can be specified.
- Remote auto lock cannot be launched when your A5514SA is powered off or when it cannot receive radio waves.

Other Features

The A5514SA has other useful features which are not presented in this Basic Manual.

Standby Screen Settings

You can set photos taken by the camera and images obtained via the Internet or E-mail as the standby screen.

E-mail/C-mail Settings

You can set the E-mail/C-mail environment. Setting in advance allows you to use them comfortably.

Data Folder

Data obtained via the Internet or Email, photos and movies taken by the camera are saved in Data Folder, where you can save a variety of data by category.

EZ apps (BREW®)

You can download and use applications such as games and standby screens. Also, you can read QR code or character by Bar Code Reader or Character Reader, which allows you to access information sites or look up dictionary.

Speaker-Phone Function

You can call without holding the A5514SA in your hand.

Journal

You can create simple journal with images.

Pocket Money Log

You can create pocket money log of the current and previous month.

Dictionary

Dictionaries such as Japanese-English and English-Japanese are included, which may be useful in foreign countries.

Index

Number

184+Dial	24
186+Dial	24

A

AC Adapter	10, 12
Address Book	
Editing	40
Making a Call	39
Saving	36, 41
Address Filter	51

B

Basic Operation	14
Battery Level	13
Before Use	10

C

C-mail	
C-mail Menu	53
Creating	53
Reading	55
Receiving	55
Sending	53
Call	
Making	24, 26, 39, 43
Receiving	25
Camera	
Movie	59
Photo	58
Photo Mail	61
Sending	61
Chaku-Uta®	65
Charging	12

D

Data Size	57
Desktop Holder	10, 12
Dialed Calls Log	26, 41
Disaster Message Board Service ..	6
Download	65
Drive Mode	4

E

E-mail	
Creating	45
E-mail Menu	45
Initial Setting	20
Reading	48
Receiving	48
Replying	50
Sending	45, 61, 86
E-mail Address	
Changing	22
Confirming	21
Earpiece Volume	27
English Characters	93
EZ · FM	74
EZnavi	
Area Message	70, 73
EZ Navi Walk	71
Position Search	70, 72
EZweb	
Basic Operation	64
EZ password	66
EZ Top Menu	63
Initial Setting	20

F

Favorite Site	
Accessing	68
Registering	67

G

Global Function	34
Guide	82

I

In-Phone Ans Machn	
Playing	33
Releasing	32
Setting	32
Infrared Communication	76
Initial Setting	20
Inputting Characters	
Emoticons	95

English	93
Input Mode	90
Kana/Kanji	92
Key Assignment	91
Phrases	94
Pictograms	95
Symbols	95
Internet	62

J

Junk Mail	51
-----------------	----

K

Kana/Kanji	92
Key Functions	14

L

Language	18
----------------	----

M

Mail	
C-mail	52
E-mail	44
Mail Filter	51
Main Menu	17
Main Screen	16
Missed Call	25
Movie	
Recording	59
Sending	61
Viewing	60

N

Names of Parts	11
----------------------	----

O

One-Ring Calls	5
----------------------	---

P

Pair Function	42
Phone Menu	24
Photo	
Sending	61
Taking	58
Viewing	60
Photo Mail	61

Phrases	94
Pictograms	95
Playing	
In-Phone Ans Machn	33
Movie	60
Power	13
Profile	21

R

Received Calls Log	26,41
Reception State	13
Remote Auto Lock	97
Ringer	
Adjusting the Volume	28
Changing	30

S

SANYO Flat-type Stereo Earphones 04 ..	10,74
Sending	
C-mail	53
E-mail	45
Photo/Movie	61
Photo Mail	61
Silent Mode	
Releasing	31
Setting	31
Smart Mode	
Setting/Canceling	80,81
Smart Menu	83
Standby Screen	13
Step Down/Step Up	29
Submenu	17

T

Toll	69
Troubleshooting	96

U

Unsolicited Ad Mail Filter	51
----------------------------------	----

V

Viewing the Screen	16
--------------------------	----

W

Ways of Dialing	24
-----------------------	----

For inquiries, call:

au Customer Service Center (General Information)

From regular phones:

 **0077-7-111**
フリーコール (Toll Free)

From au cellphones:

157 area code not required
(Toll Free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

Access the au online
manual from here.



モバイル・リサイクル・ネットワーク
（携帯電話の資源を再利用するネットワーク）

Cellphone and PHS operators collect
and recycle unused telephones, batteries
and battery chargers at stores bearing
the ♻️ logo regardless of brand and
manufacturer to protect the environment
and reuse valuable resources.

Sales : KDDI Corporation
Okinawa Cellular Telephone Company
Manufacturer : SANYO Electric Co., Ltd.

2RR6P10A55200
Sep 2005 1st Edition